



Awning For Patio Global

MOTORIZED GUILLOTINE SYSTEM
INSTALLATION MANUAL

M 1 9 1 0





Awning For Patio Global

0- REQUIRED TOOLS

MOTORIZED GUILLOTINE SYSTEM INSTALLATION MANUAL

M 1 9 1 0

PARTS 1/2

RECHARGEABLE DRILL

SILICONE-GUN

SOCKET-WRENCH

SCREW-DRIVER

SPIRIT-LEVEL

A1

×1

M1900-GP201-001

A2

×4

M1900-PRC001R1

A3

×2

M1900-PRC002R1

A4

×2

M1900-GP203-001

A5

×8

YHB MATKAP UÇLU VİDA-DIN7504-N ST4,8x50

A6

×1

M1900-GP204-001

A7

×4

YHB-MU-VİDA-DIN7504-N ST4,8x38

A8

×4

ISO 4017 - M8 x 16-S

A9

×4

YAYLI PUL-DIN 128 - A8

A10

×1

M1900-MNTJ004

A11

×1

M1900-MNTJ003

A12

×1

M1900-MNTJ002

A13

×1

M1900-MNTJ001



Awning For Patio Global

INSTALLATION MANUAL


M 1 9 1 0

PARTS 2/2

A14

×1


M1900-ALTMNTJ003

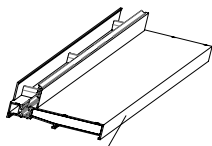

A15

×8


YSB-MU-VIDA-DIN7504-N-4.8X50



A16

×4


YSB MU-DIN7504-N 4.8X25



A17

×2


M1900-ISICAM-002

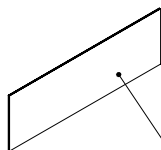

A18

×1


M1900-ISICAM-001

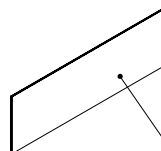

A19

×4

M1910-GP312-002



A20

×4


M1910-GP312-003



A21

×1


M1910-GP312-001

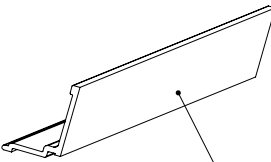

A22

×1


EPDM212138
(3mm KAMA FITL)

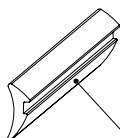

A23

×2


M1900-PRC025

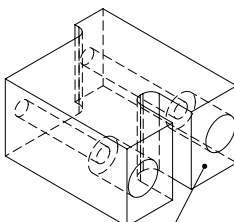

A24

×2


M1900-PRC016

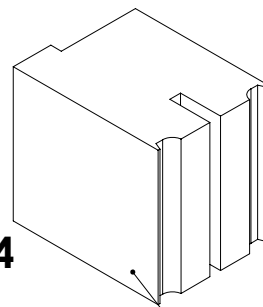

A25

×2


M1900-ALTMNTJ004

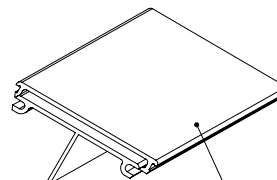

A26

×2


M1900-GP211-001

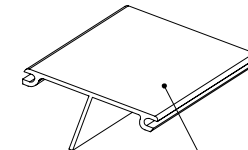

A27

×1


EPDM1910002
(9mm KAMA FITIL)

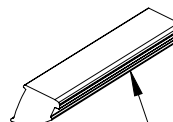

A28

×2


M1900-PRC024



A29

×2


M1900-PRC022

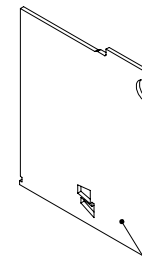

A30

×1

GP205R1

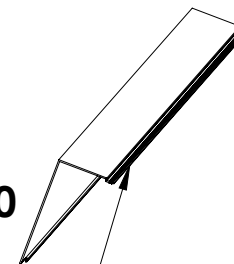



Awning For Patio Global

INSTALLATION MANUAL


M 1 9 1 0

MNTJ005 A

A1

× 1

M1900-GP201-001

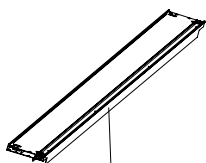

A2

× 4


M1900-PRC001R1



A3

× 2

M1900-PRC002R1

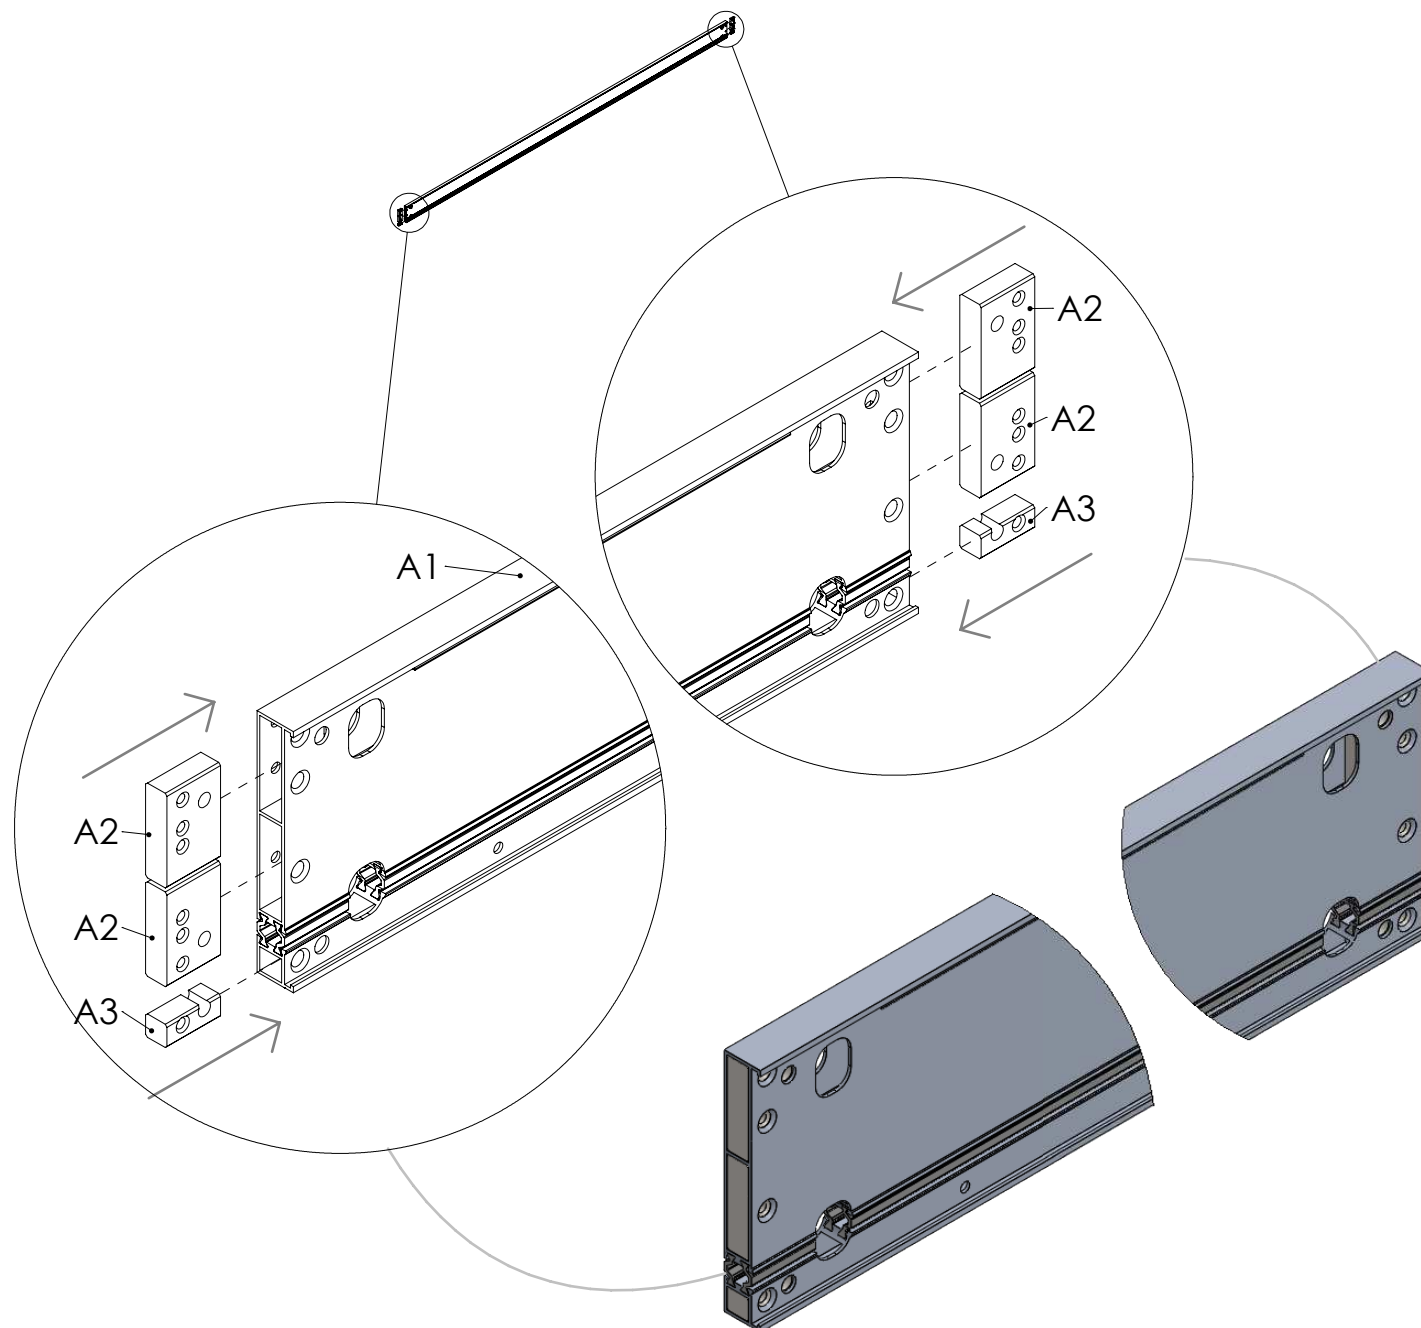



Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

MNTJ005 B

MNTJ005A

× 1

A4


× 2

M1900-GP203-001

A5

× 8

YHB MATKAP UÇLU VİDA-DIN7504-N ST4,8x50

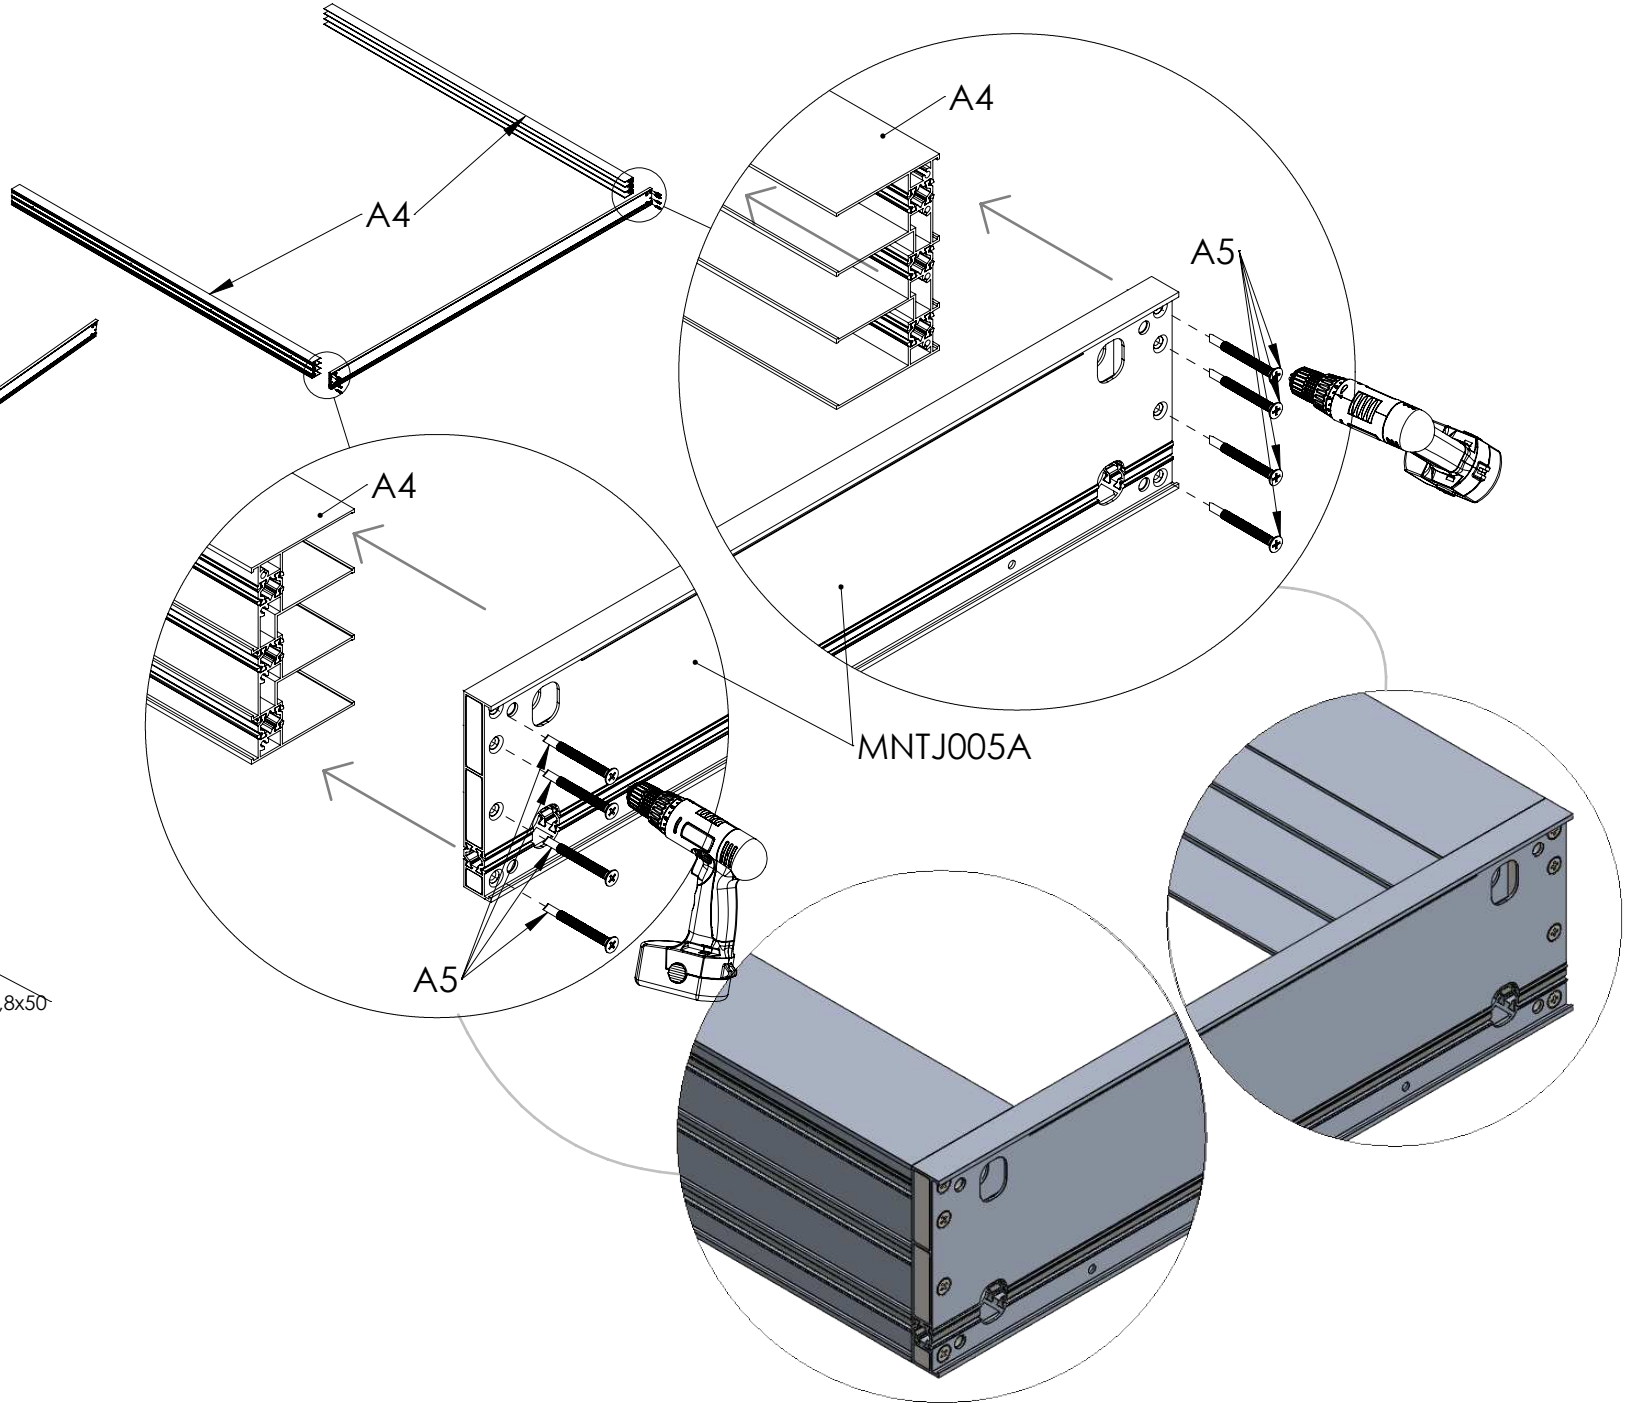




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

MNTJ006

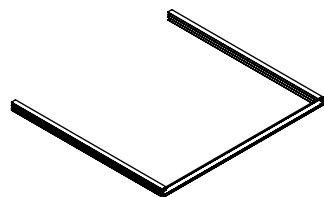

MNTJ005A

× 1



A8

× 4

ISO 4017 - M8 x 16-S



A9



× 4

YAYLI PUL-DIN 128 - A8

A10

× 1

M1900-MNTJ004

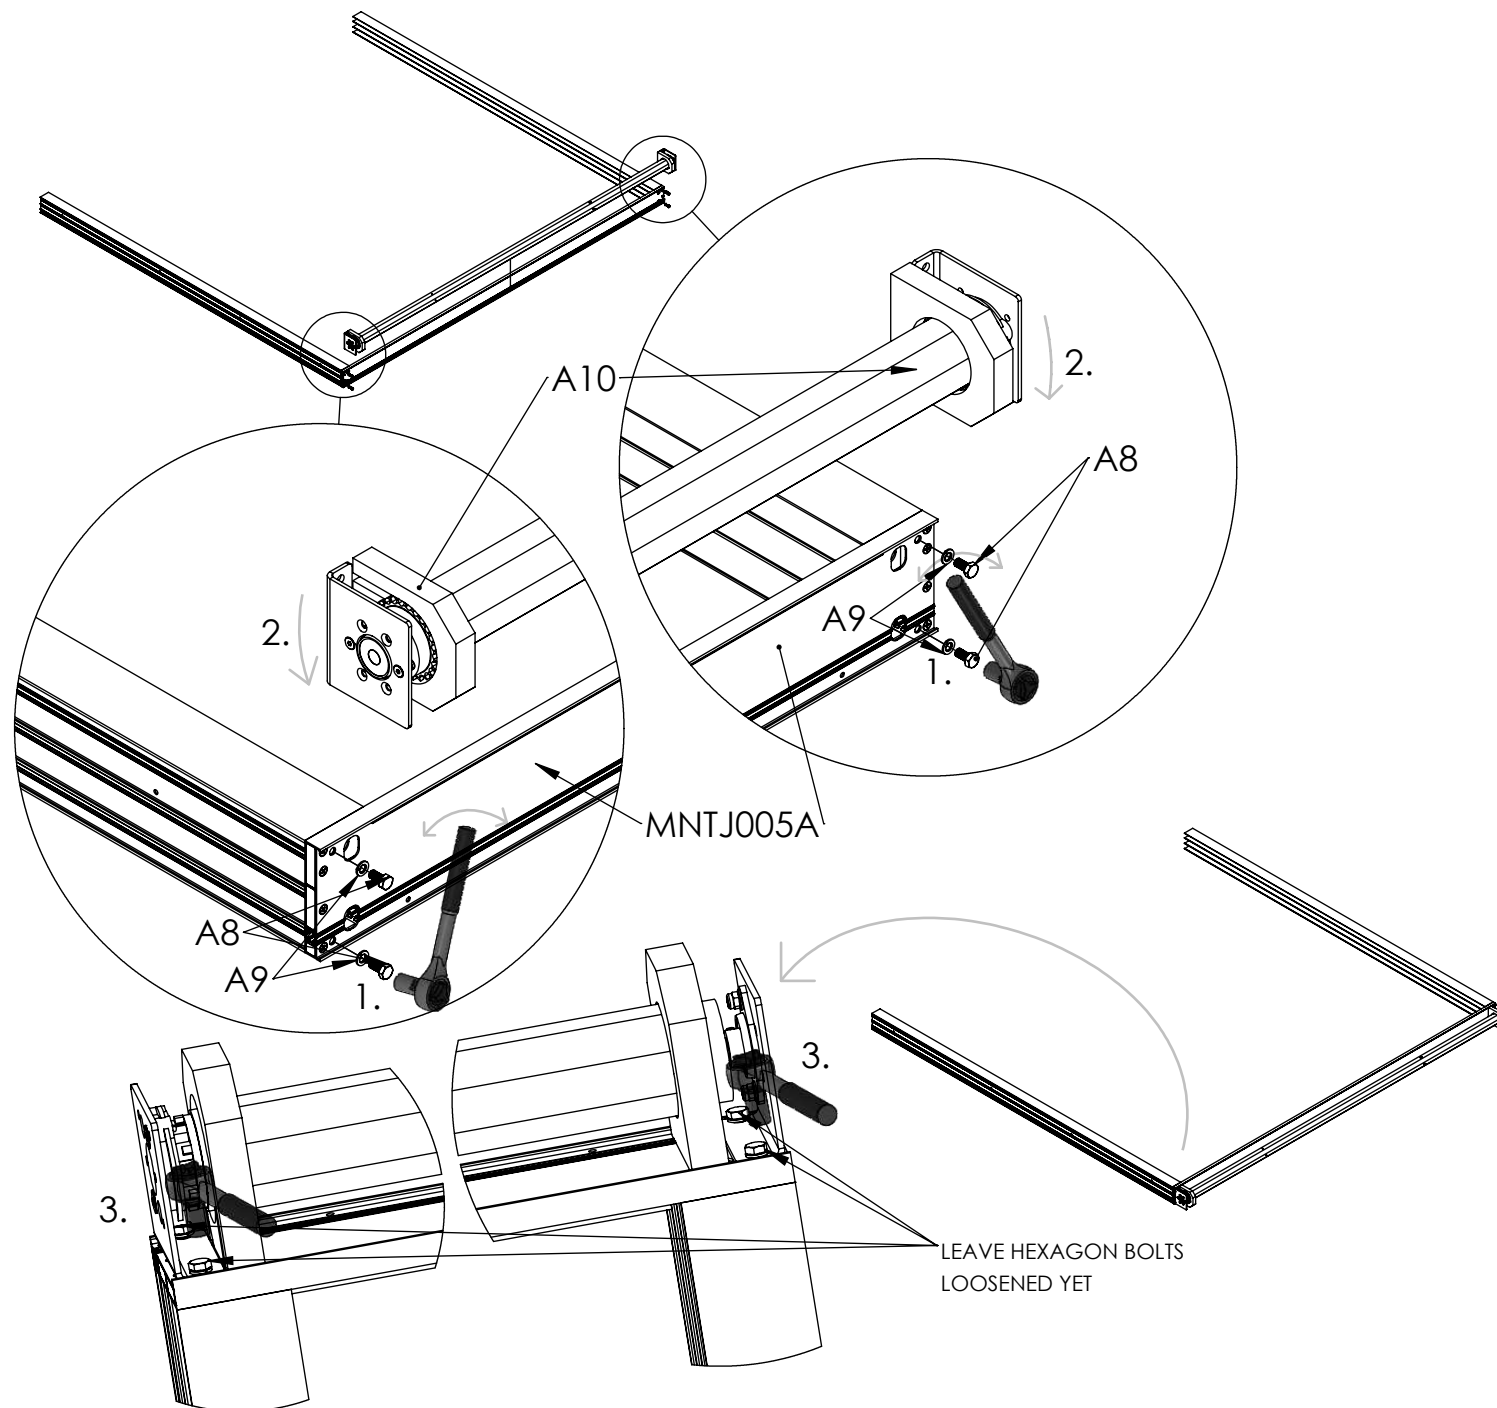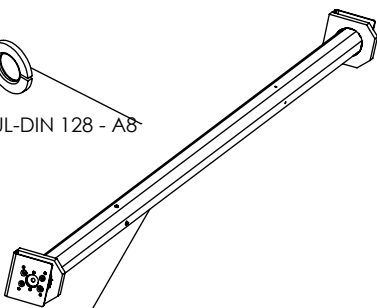




Awning For Patio Global

INSTALLATION MANUAL


M 1 9 1 0

MNTJ007 A

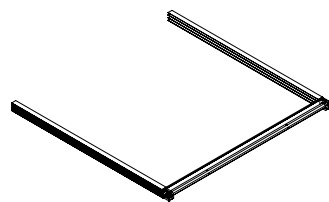

MNTJ006B


× 1

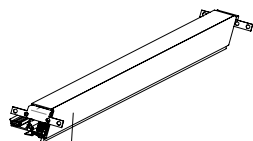

A11

× 1

M1900-MNTJ003

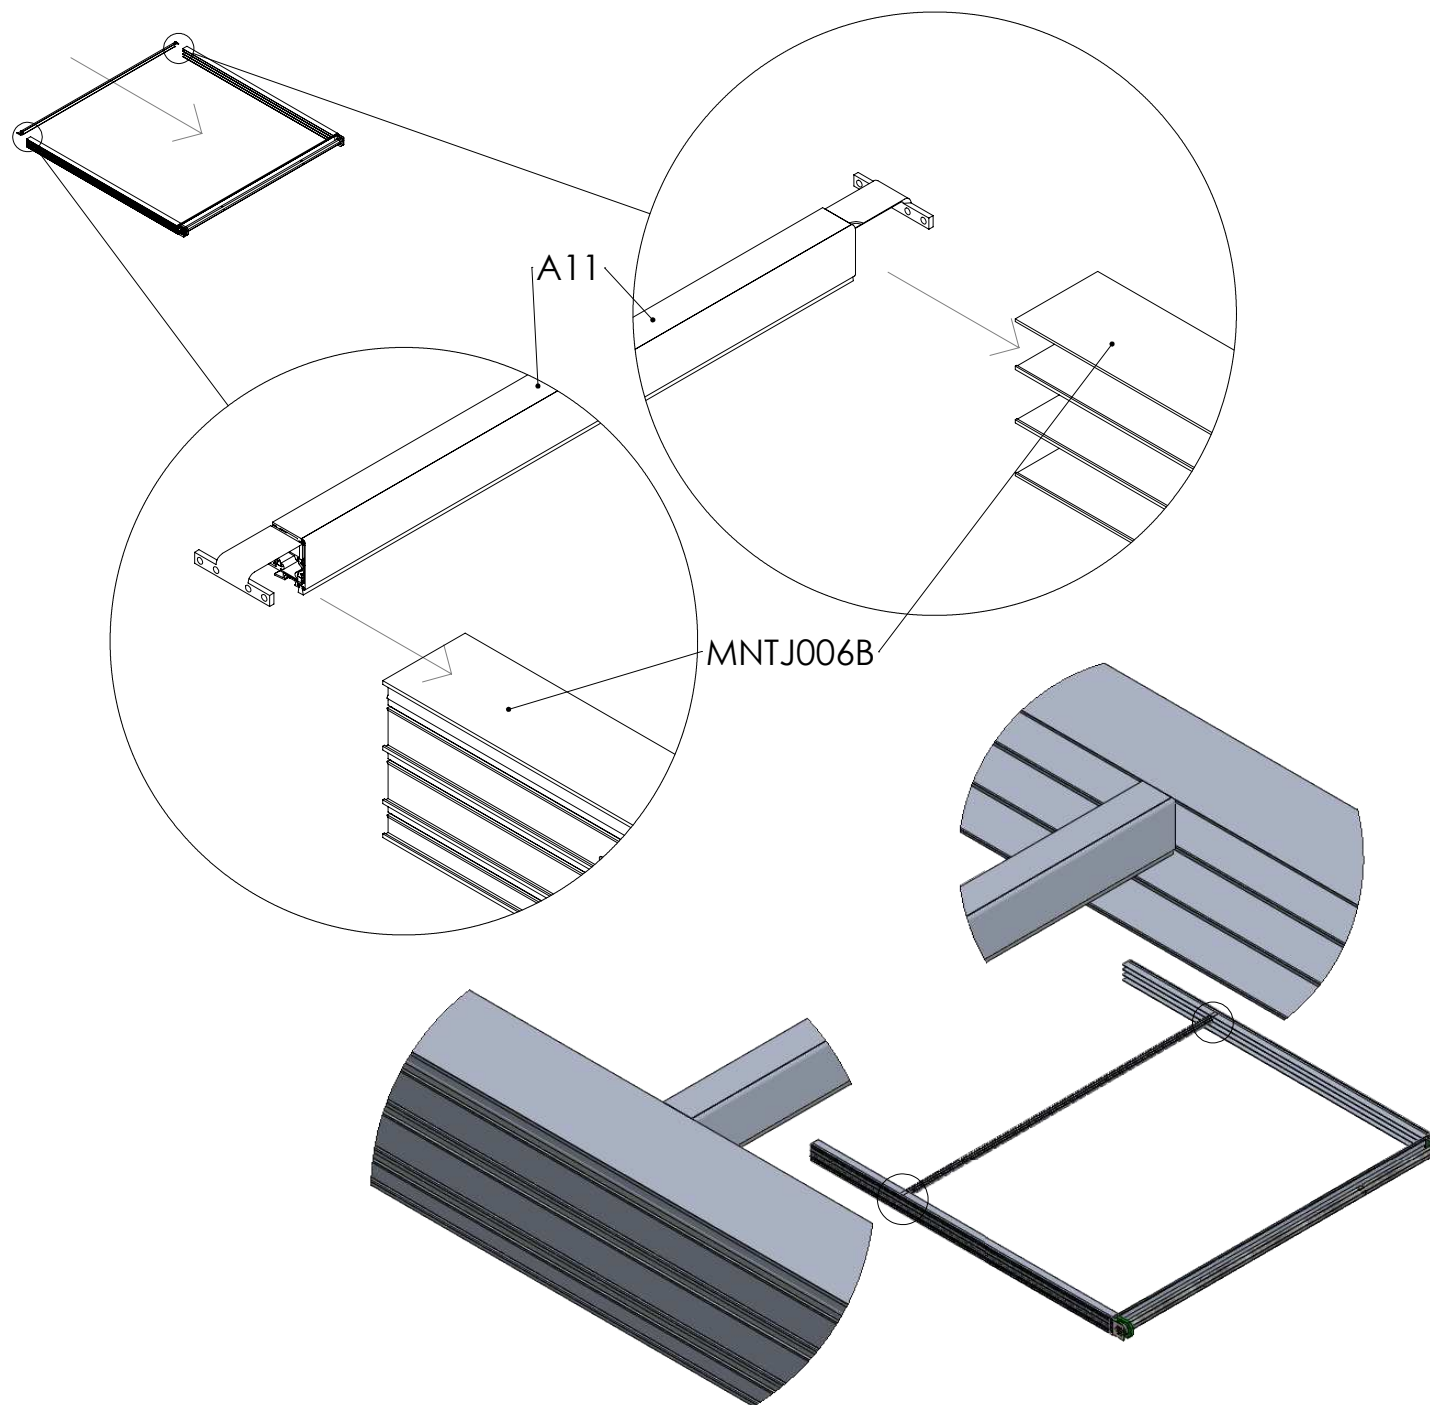




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

MNTJ007 B

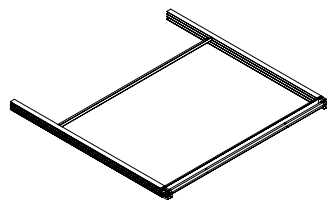



MNTJ007A

× 1

A12

× 1

M1900-MNTJ002

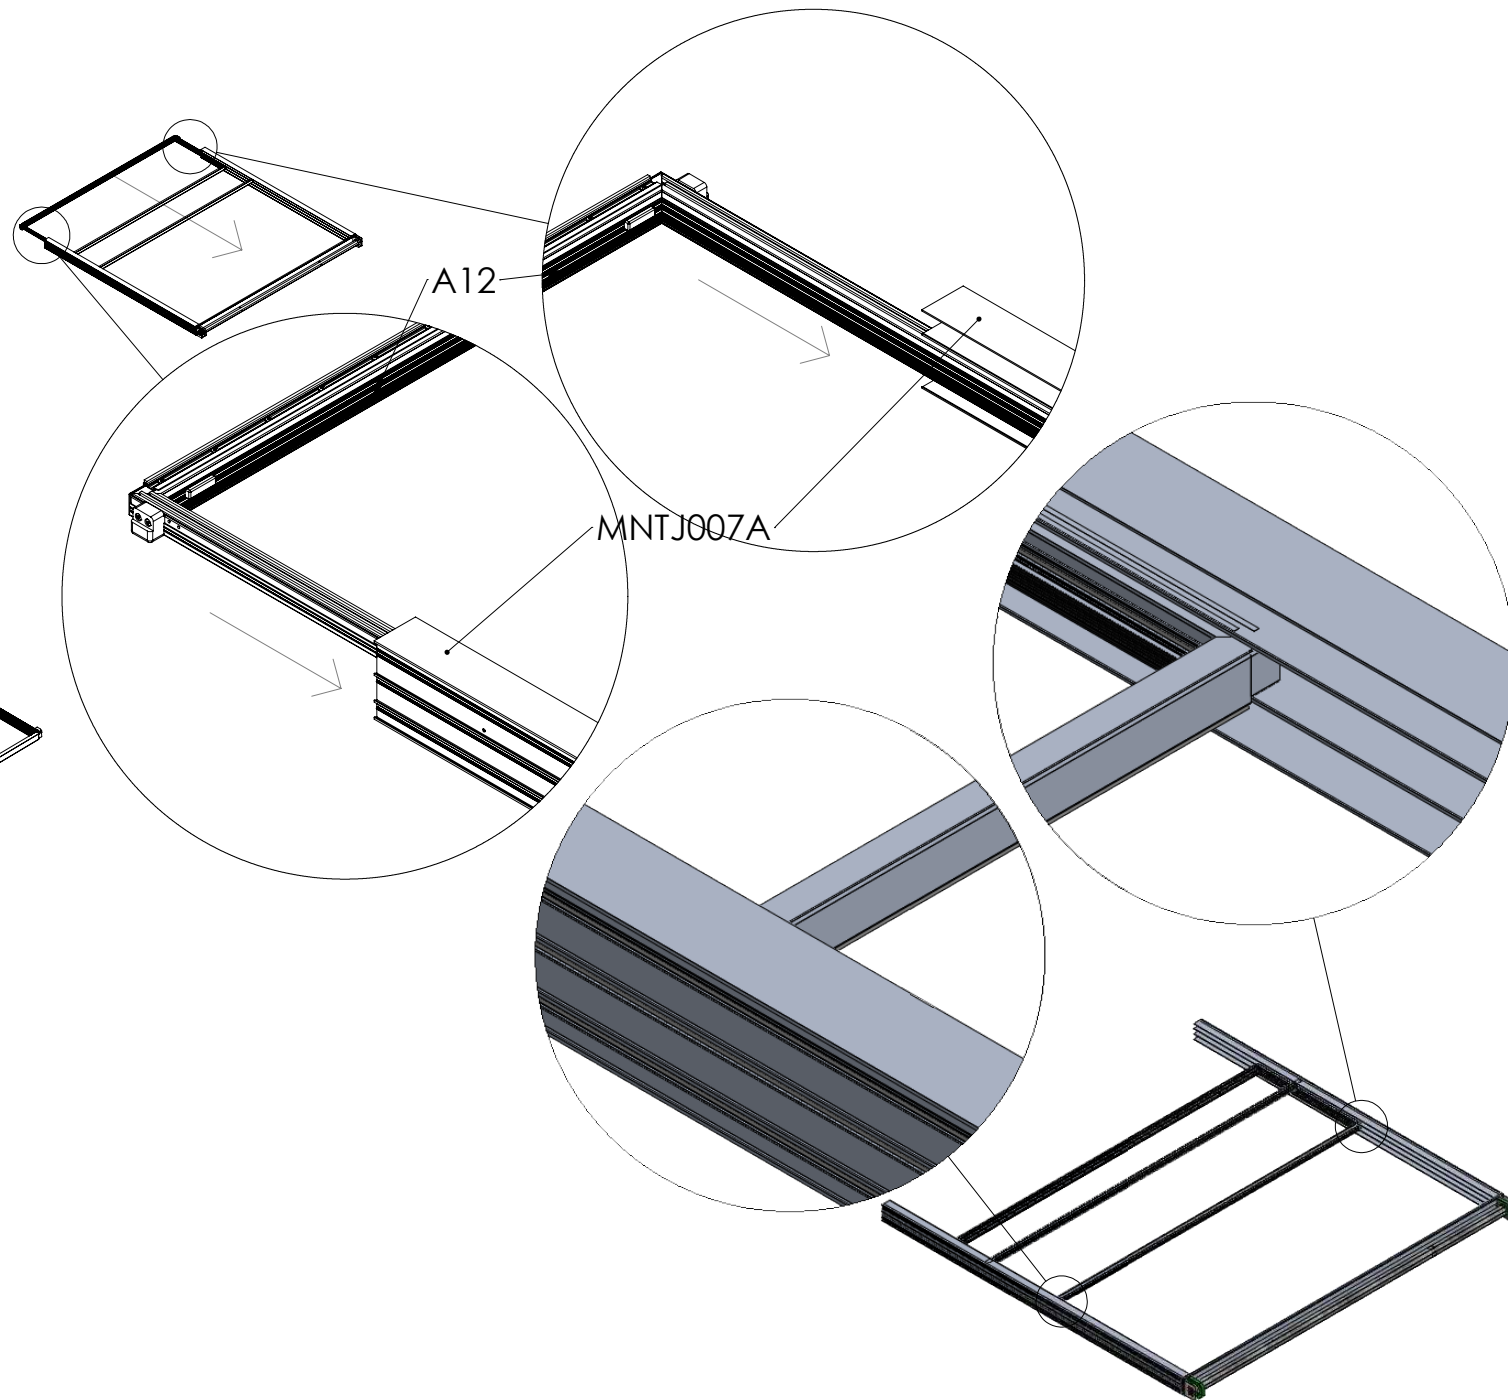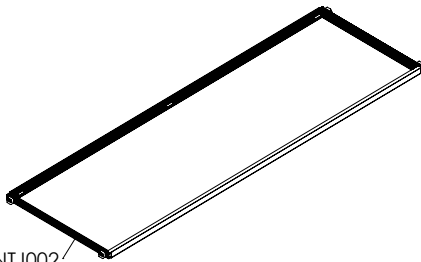




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

MNTJ007 C

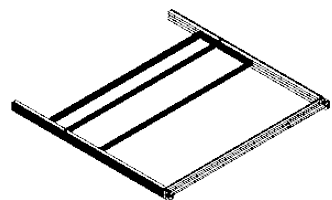



MNTJ007B

× 1

A13


× 1

M1900-MNTJ001

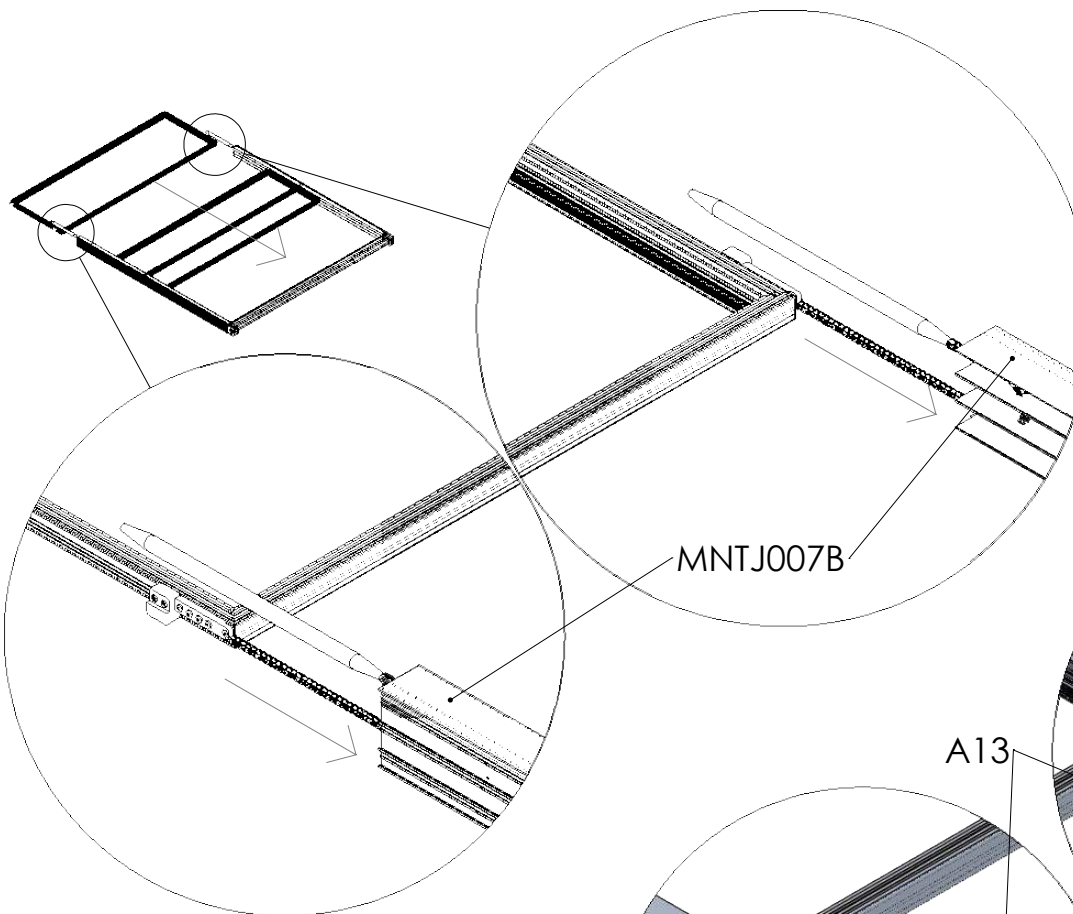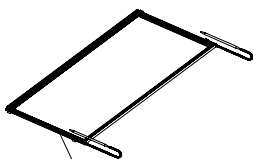


MNTJ007B


A13

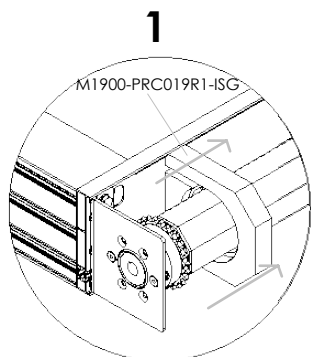


1
MOVE **M1900-PRC019s**
TO SIDES TO REVEAL
SPROCKET WHEEL

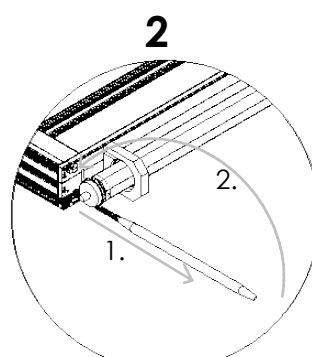

2
MAKE THE CHAIN OF
A13 PASS THROUGH
HOLES IN UPPER FRAME

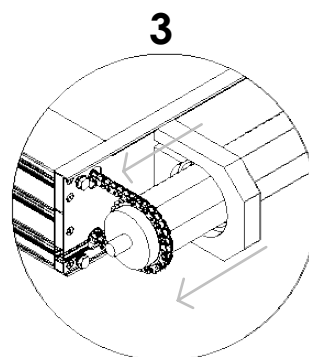

3
INSTALL CHAIN TO
SPROCKET, THEN MOVE
M1900-PRC019s BACK
AND TIGHTEN **A8s**.

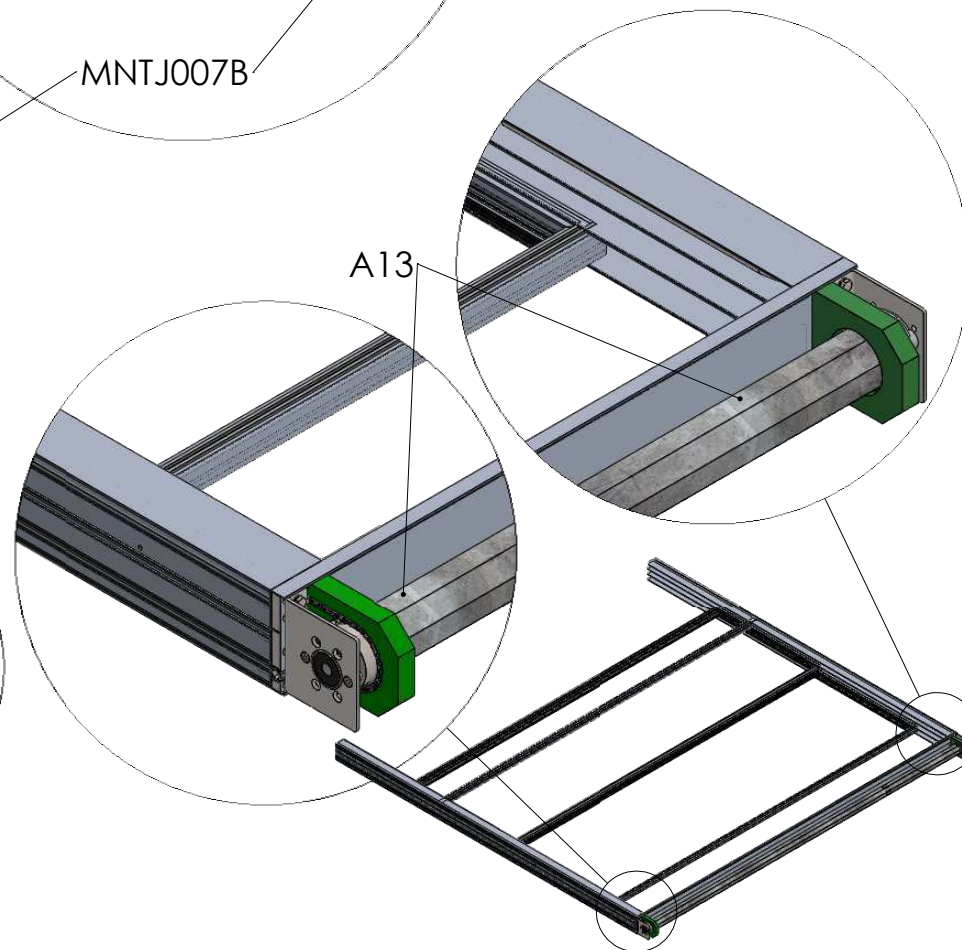




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

MNTJ007 D

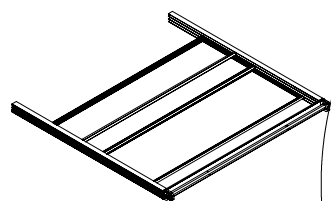


MNTJ007C

× 1

A14

× 1



M1900-ALTMNTJ003

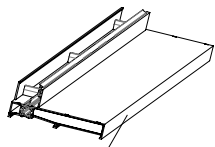

A15

× 1

YSB-MU-VİDA-DIN7504-N-4.8X50

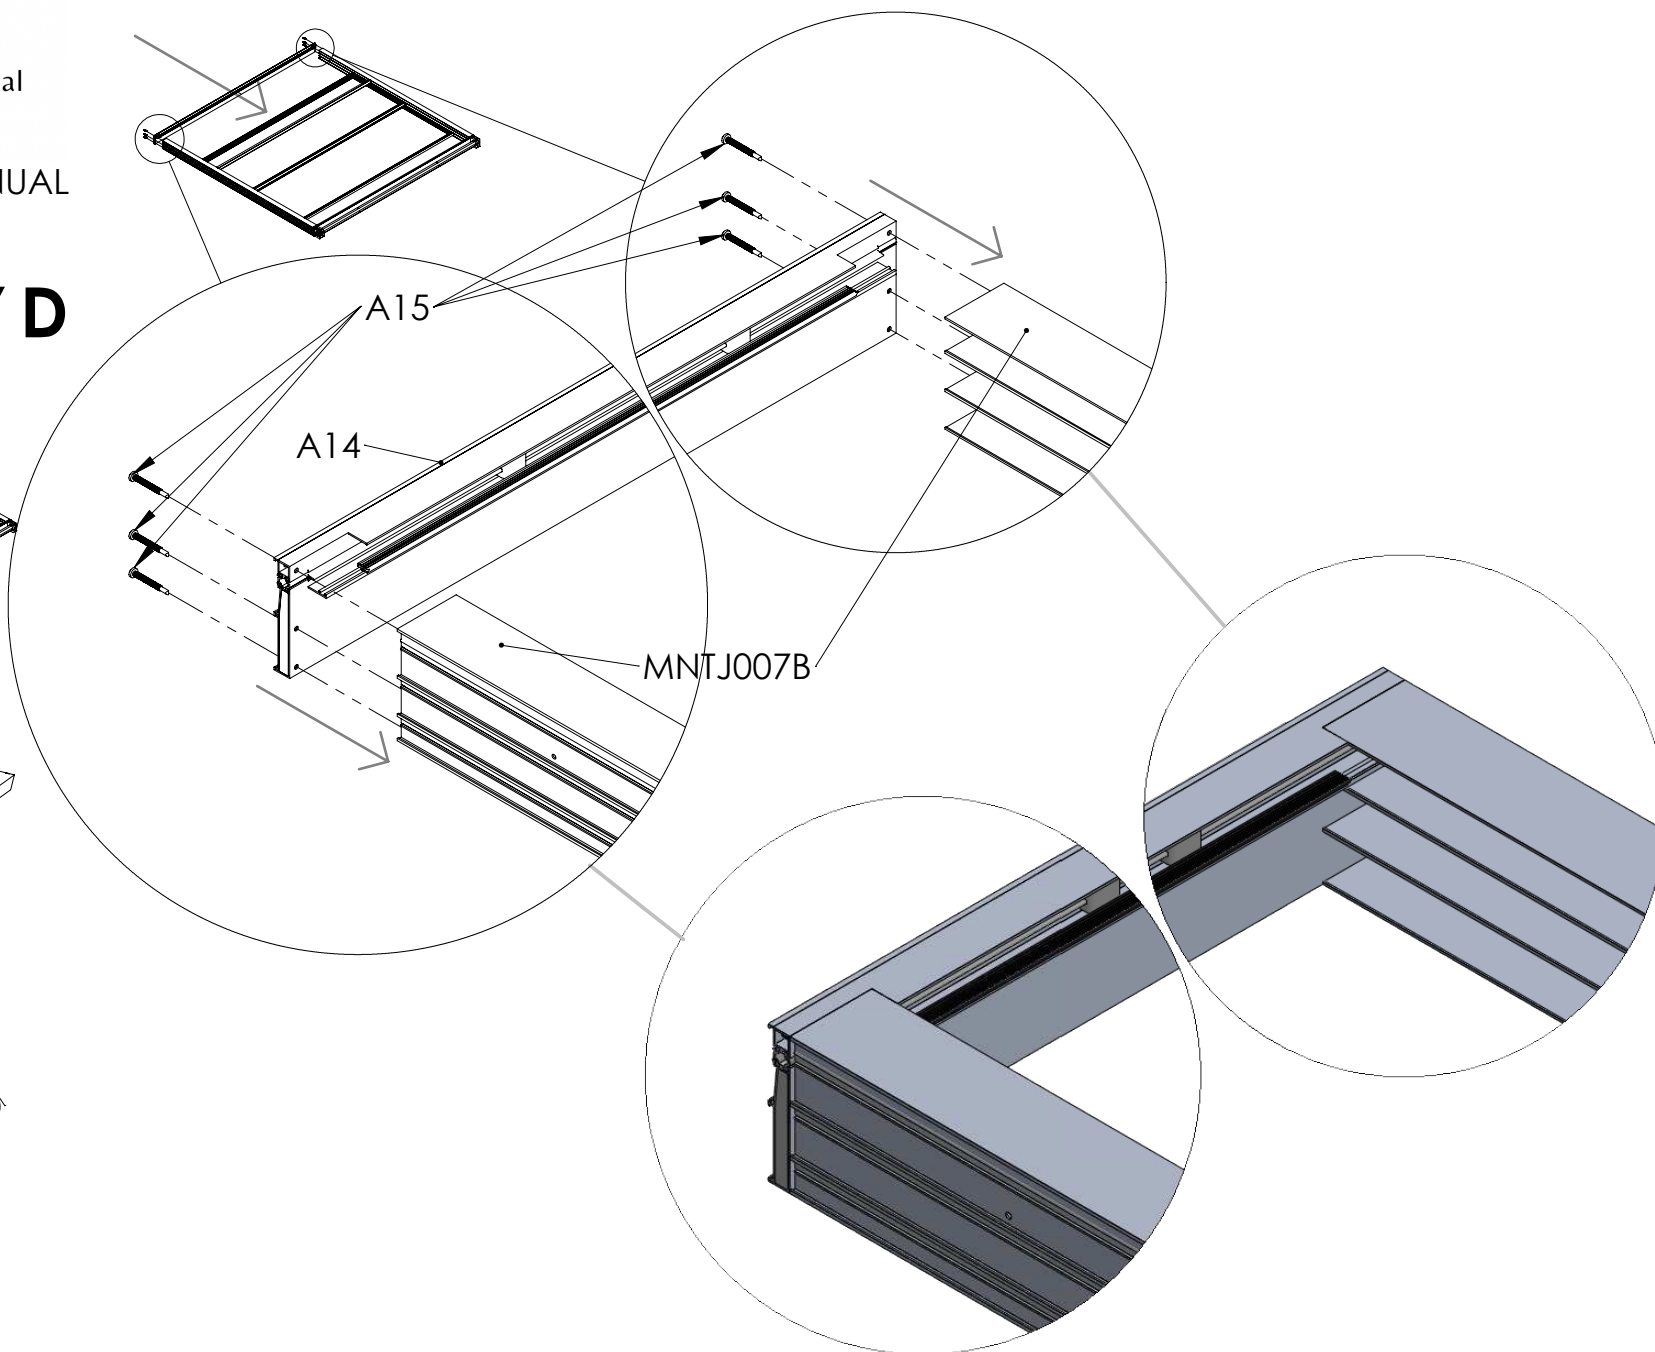




Awning For Patio Global

INSTALLATION MANUAL


M 1 9 1 0

MNTJ007 E

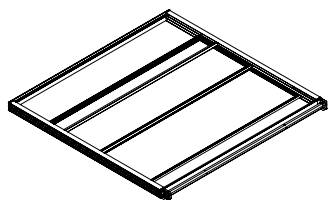


MNTJ007D

× 1

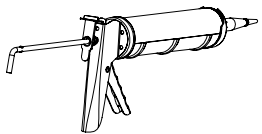

SILICONE GUN

× 1

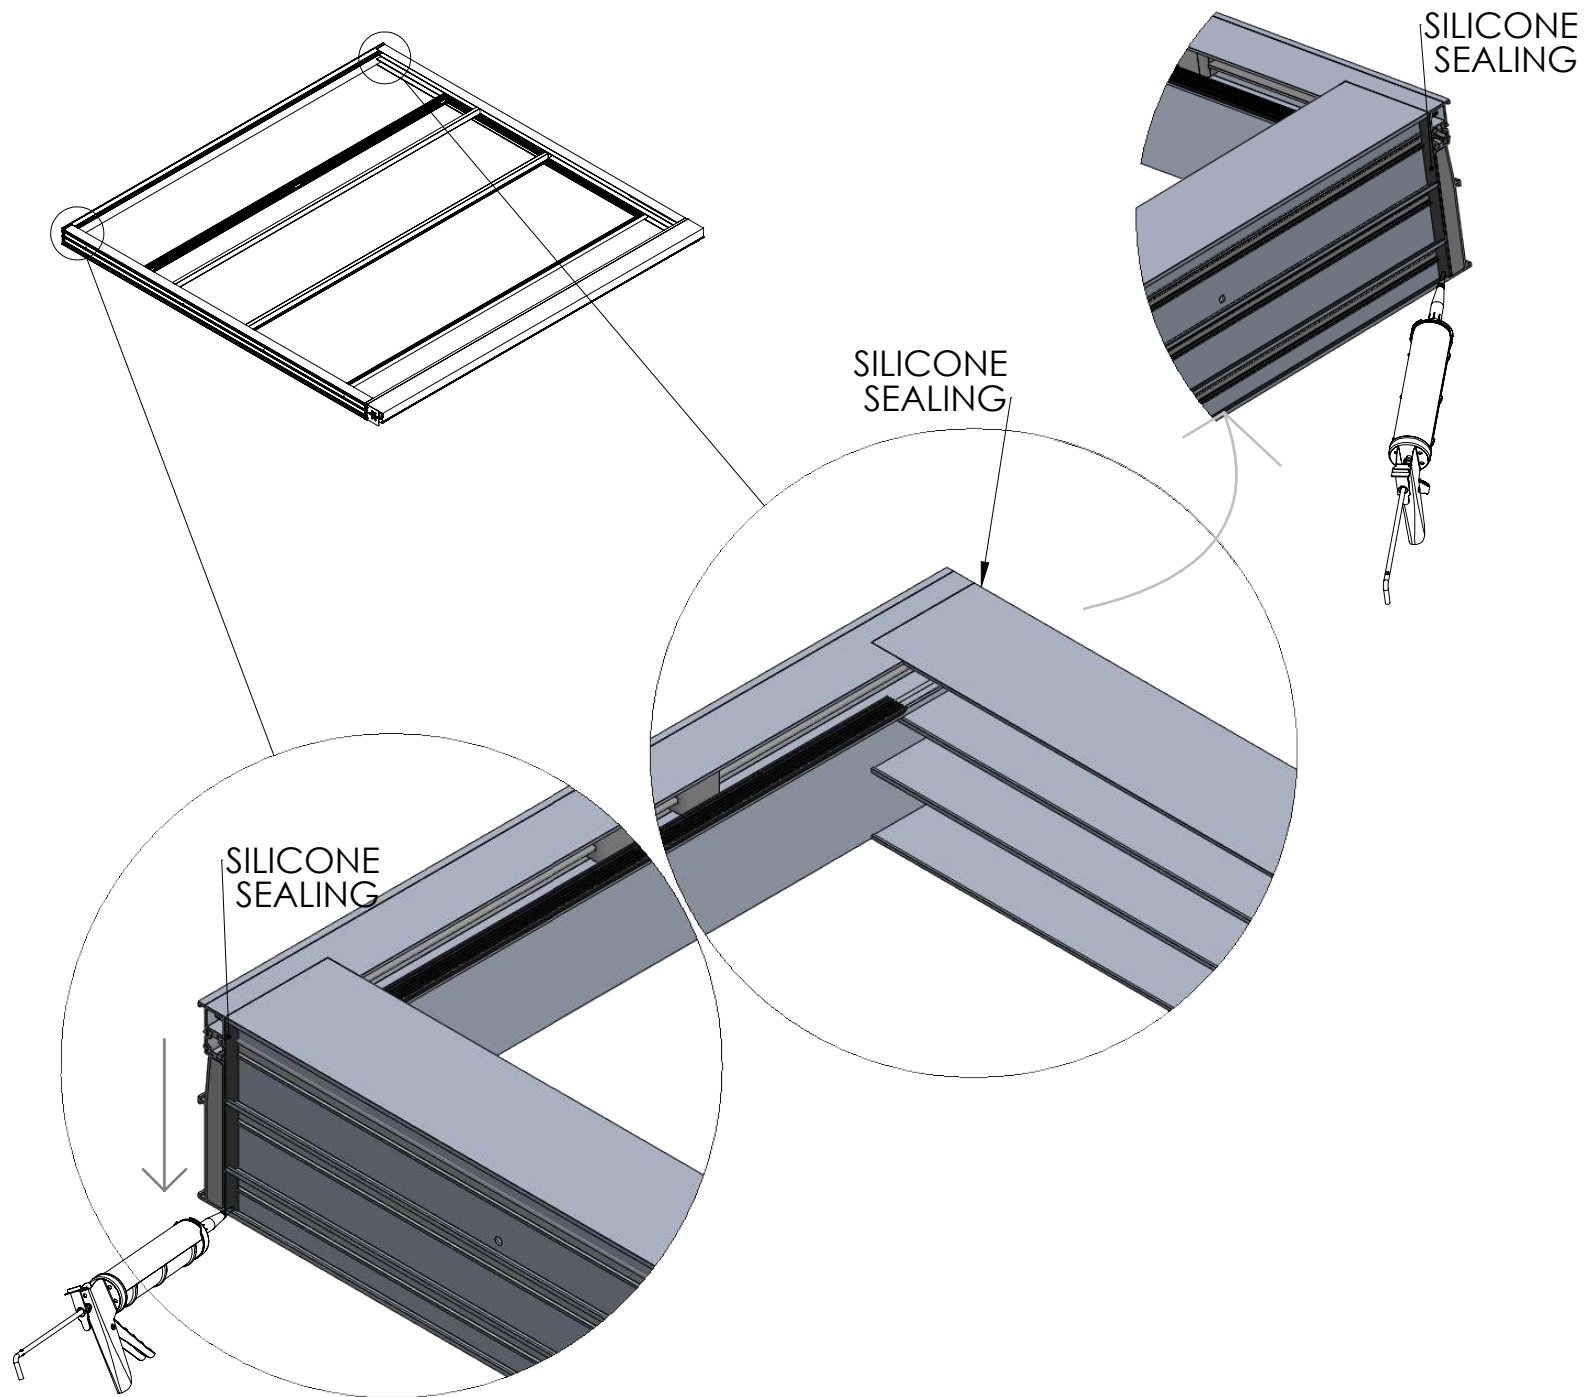




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

MNTJ007 F

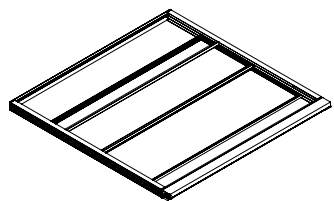

MNTJ007E


× 1

A16

× 4



YSB MU-DIN7504-N 4.8X25

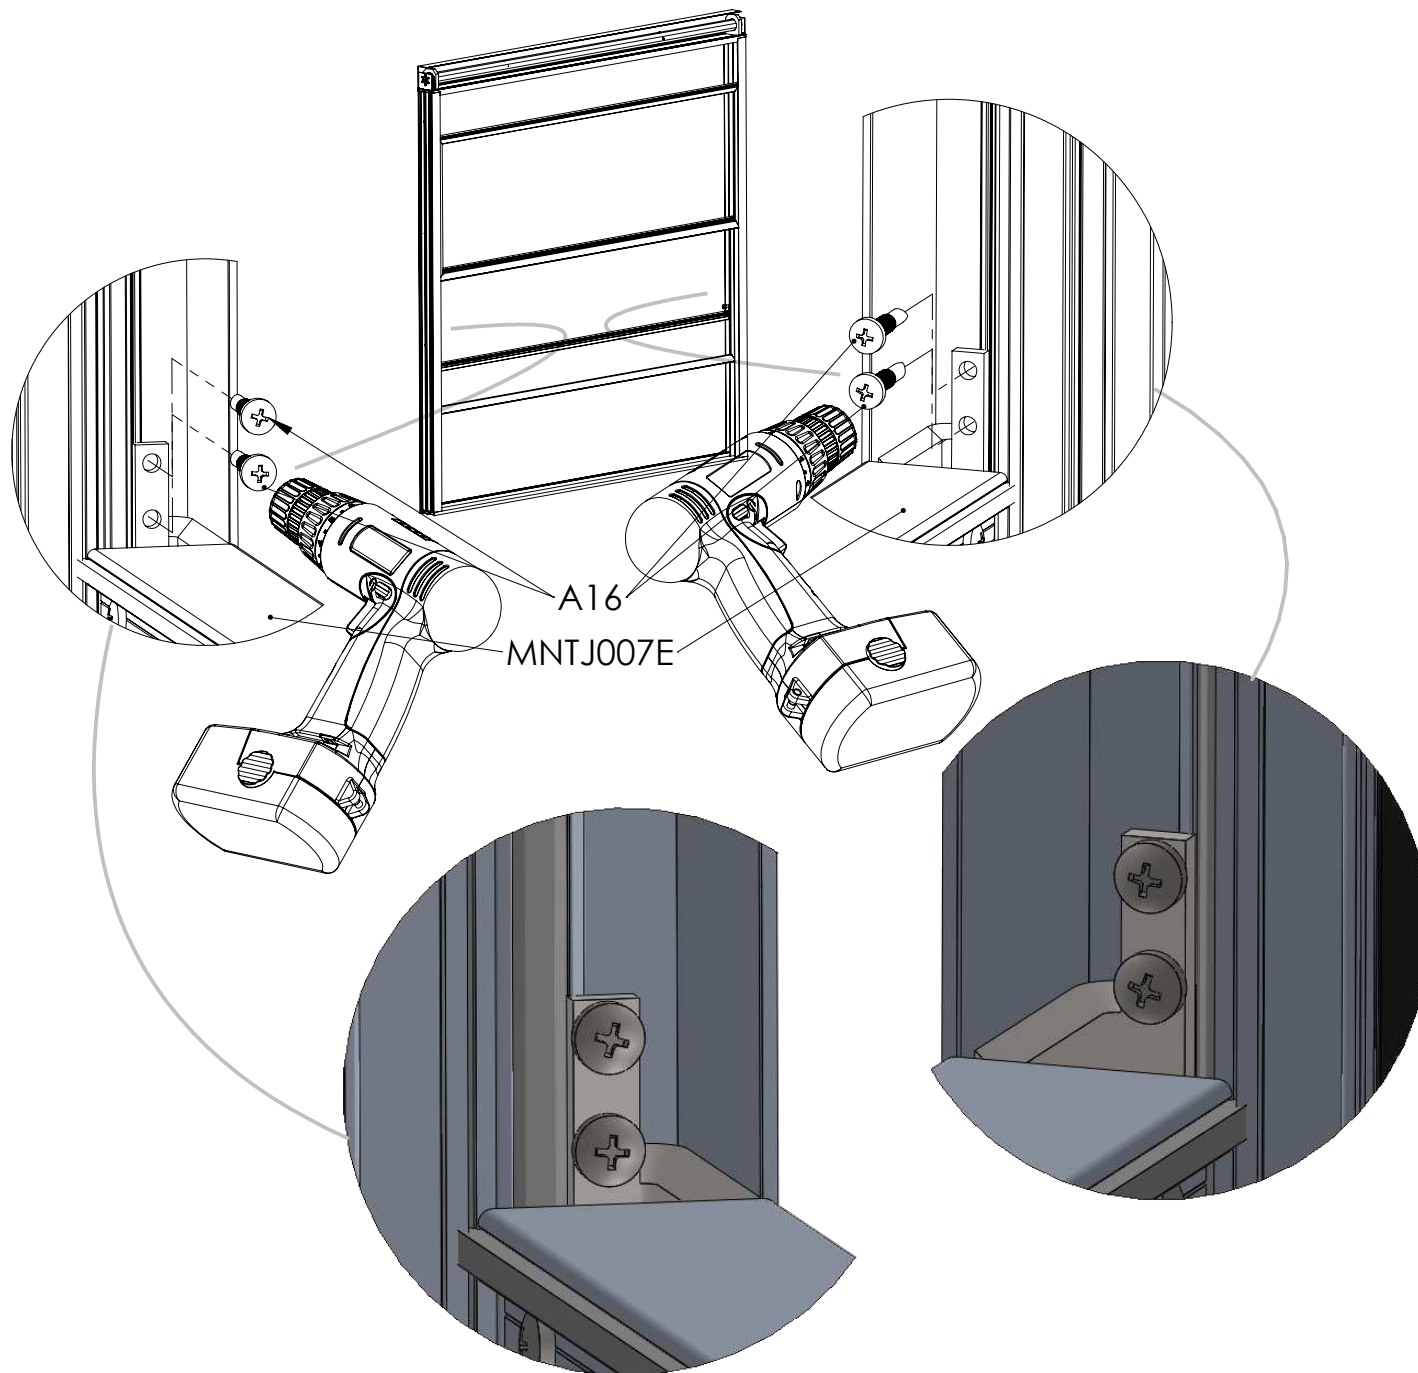




Awning For Patio Global

INSTALLATION MANUAL


M 1 9 1 0

MNTJ007 G

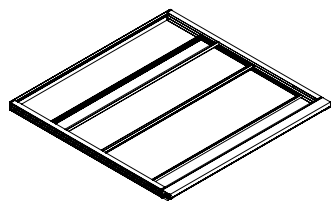

MNTJ007F

× 1

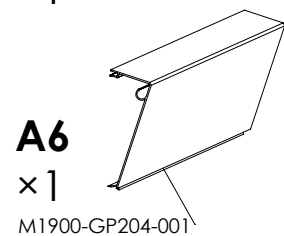

A6


× 1

M1900-GP204-001

A7

× 4

YHB-MU-VÍDA-DIN7504-N ST4,8x38

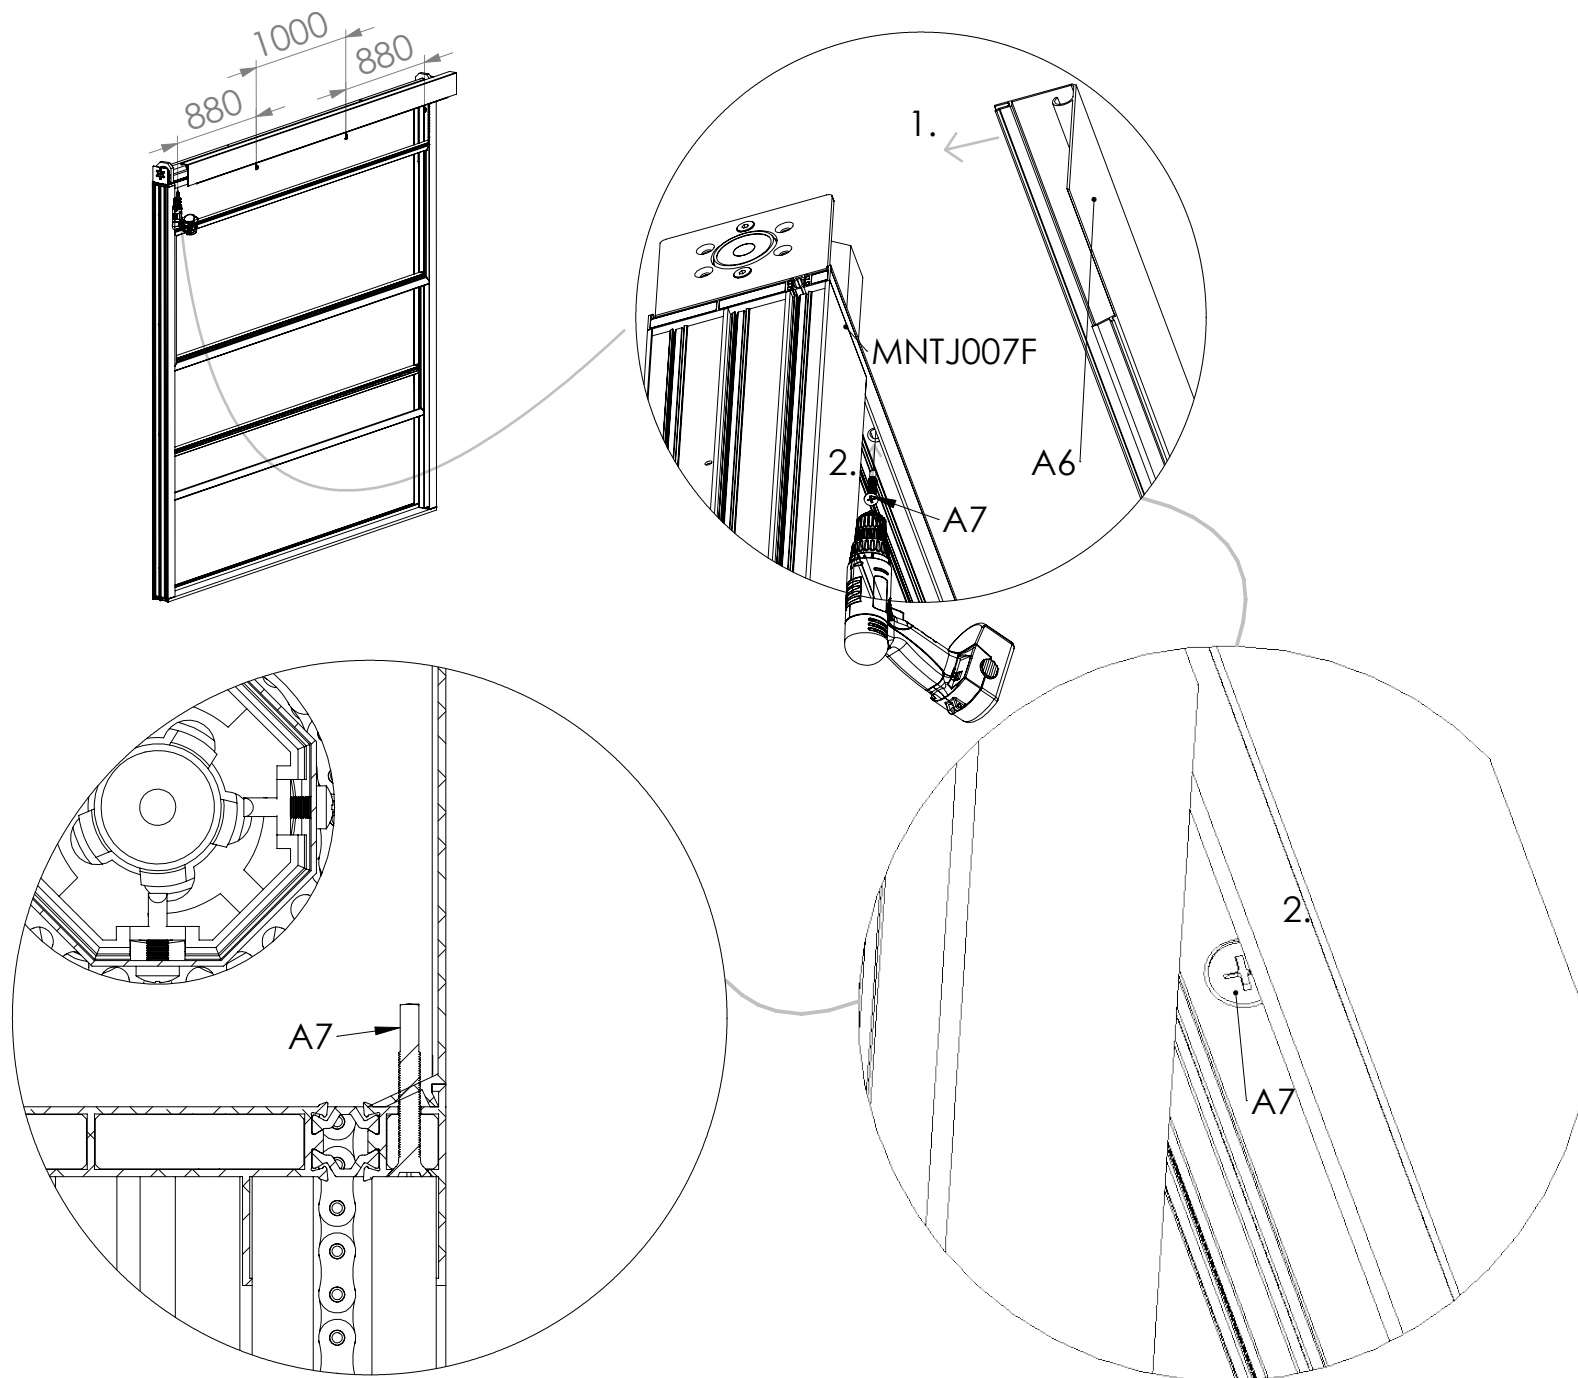




Awning For Patio Global

INSTALLATION MANUAL


M 1 9 1 0

MNTJ007 H

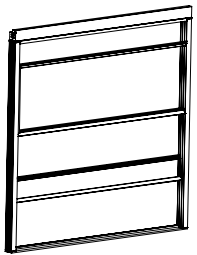

MNTJ007G


×1

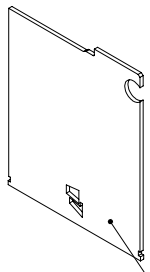

A29

×2

M1900-PRC022

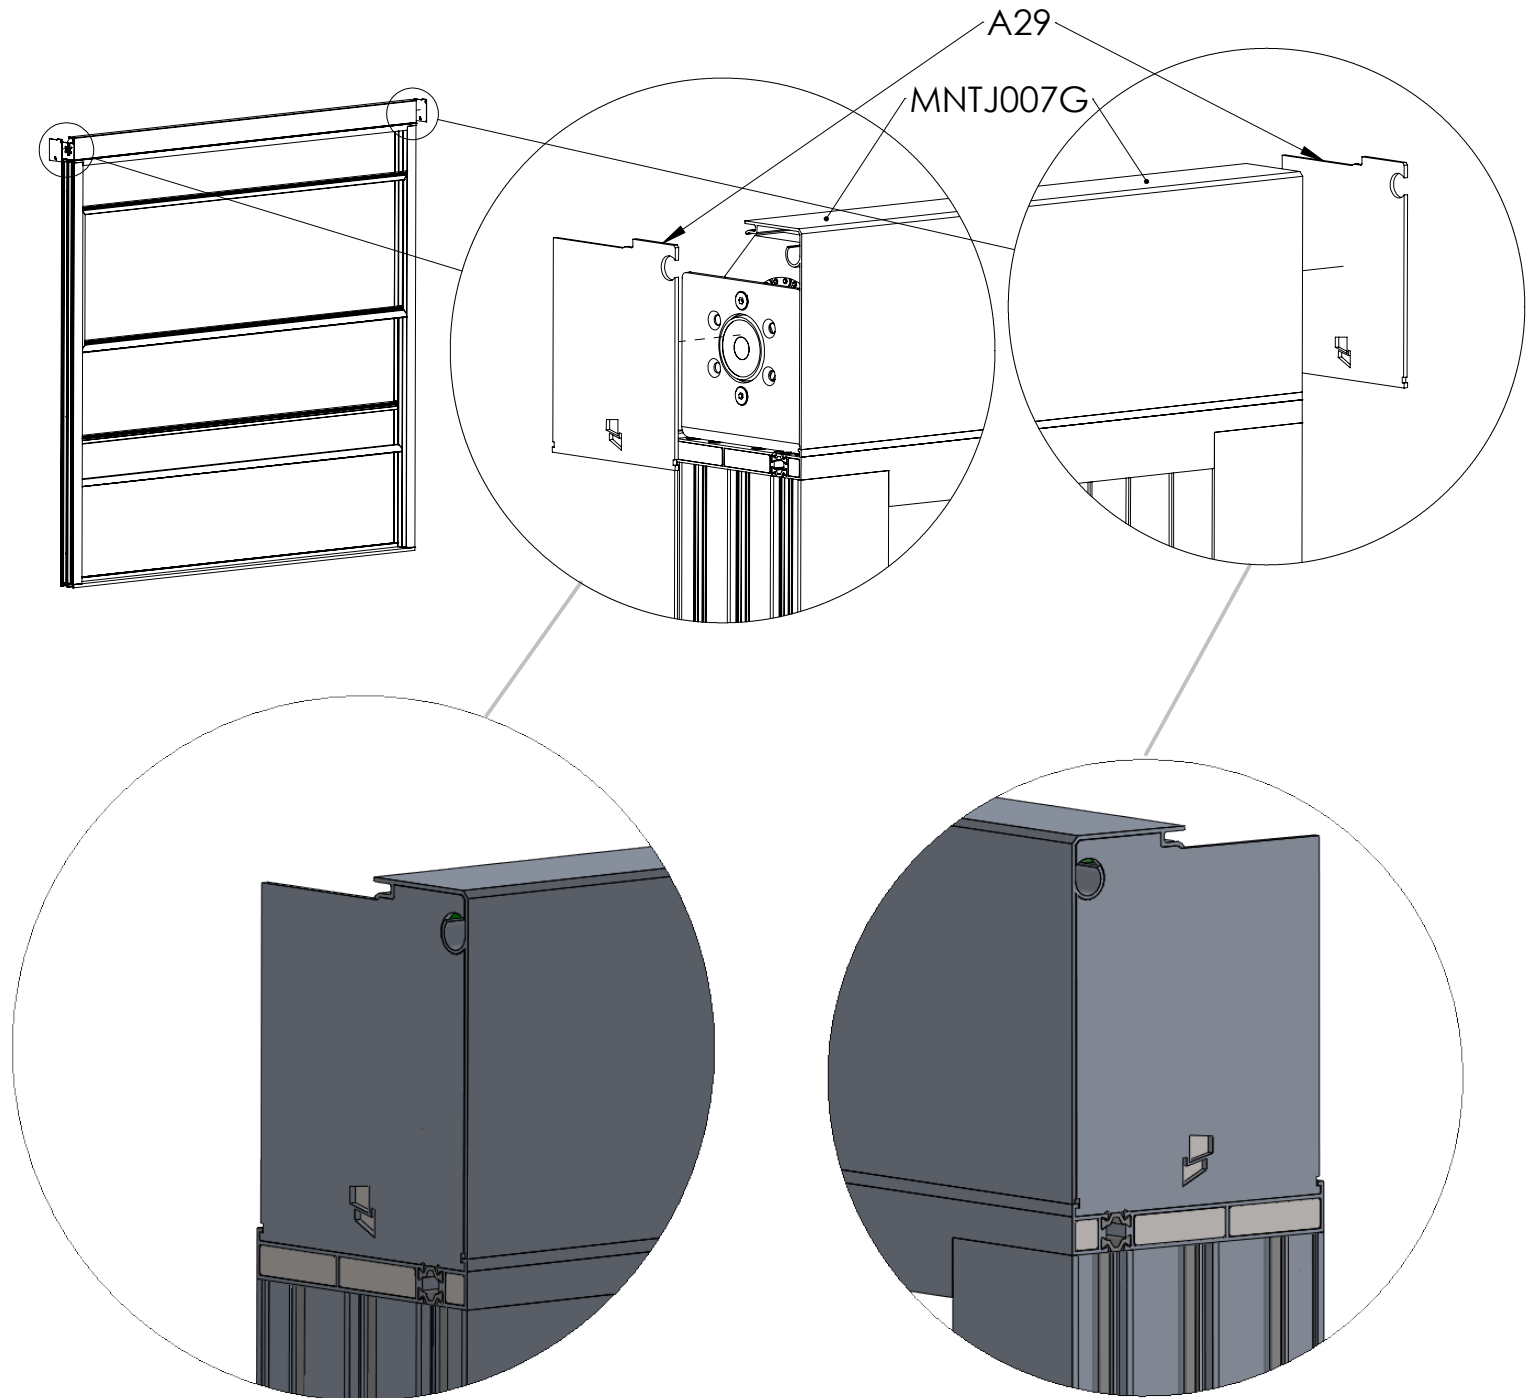




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

MNTJ007 I

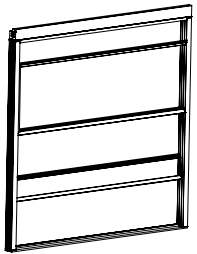


MNTJ007H
× 1



A30
× 1

GP205R1

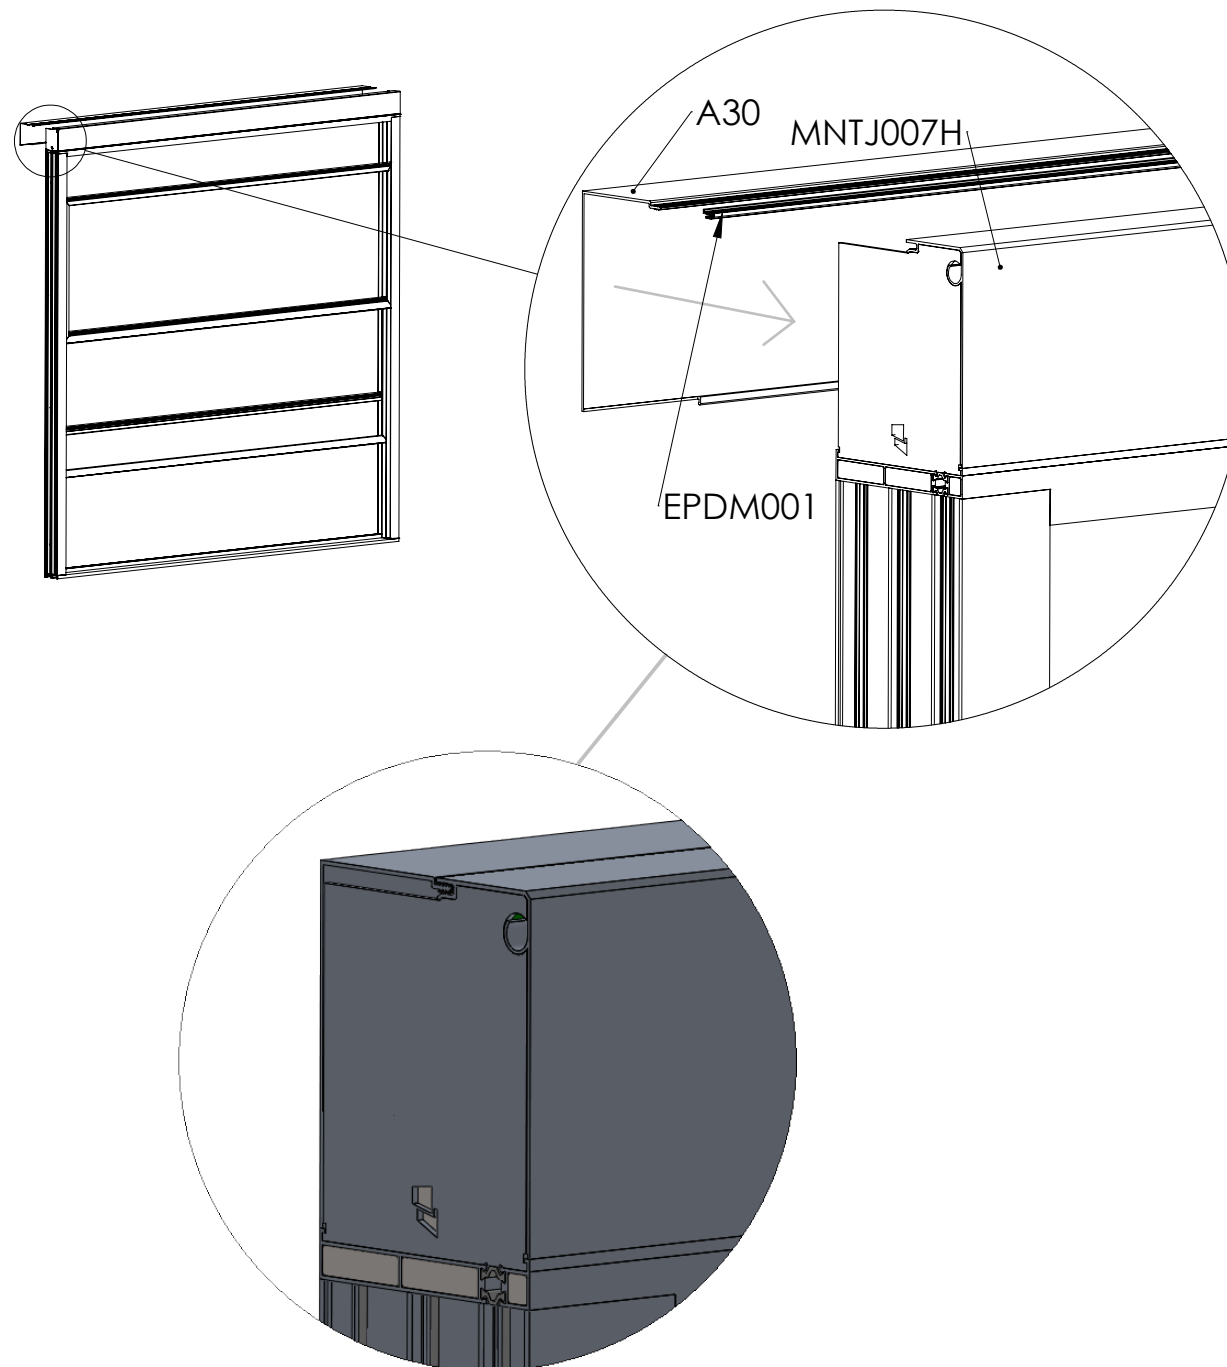




Awning For Patio Global


INSTALLATION MANUAL

M 1 9 1 0


KRLM001 **A**

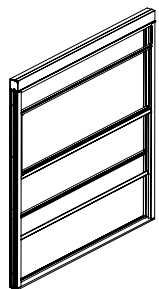



MNTJ0071
× 1

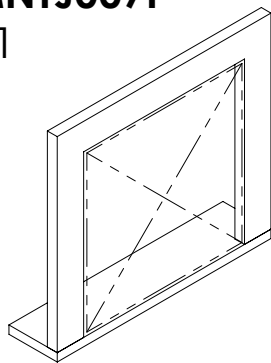

INSTALLATION SITE

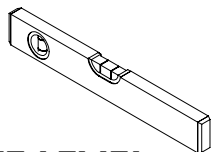

SPIRIT LEVEL

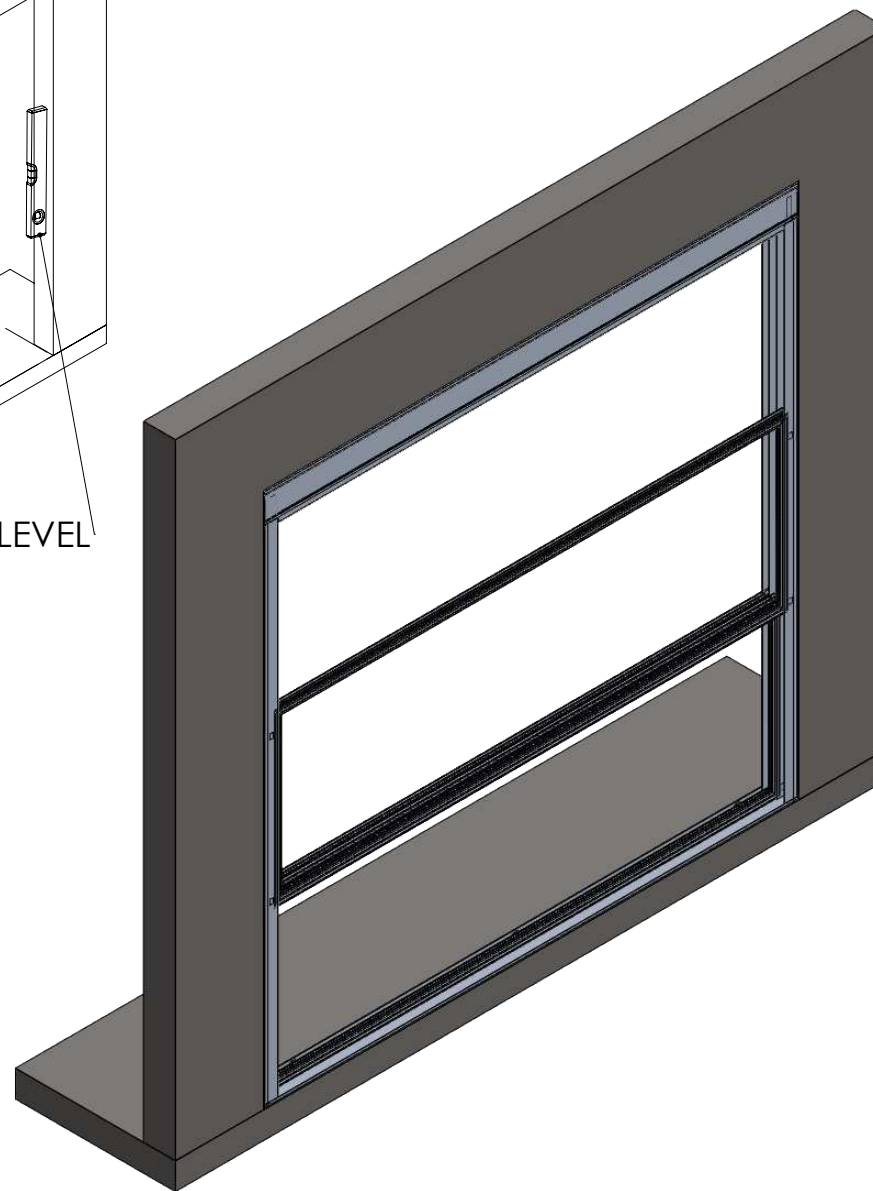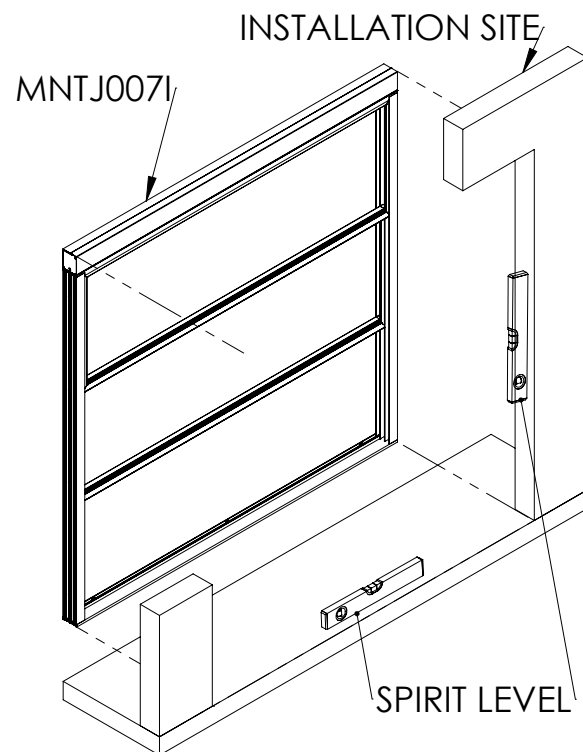




Awning For Patio Global

INSTALLATION MANUAL


M 1 9 1 0

KRLM001 B

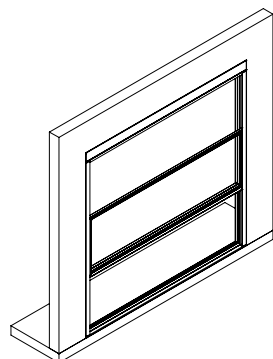


KRLM001A

× 1

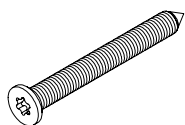

FIXING SCREW

× 8

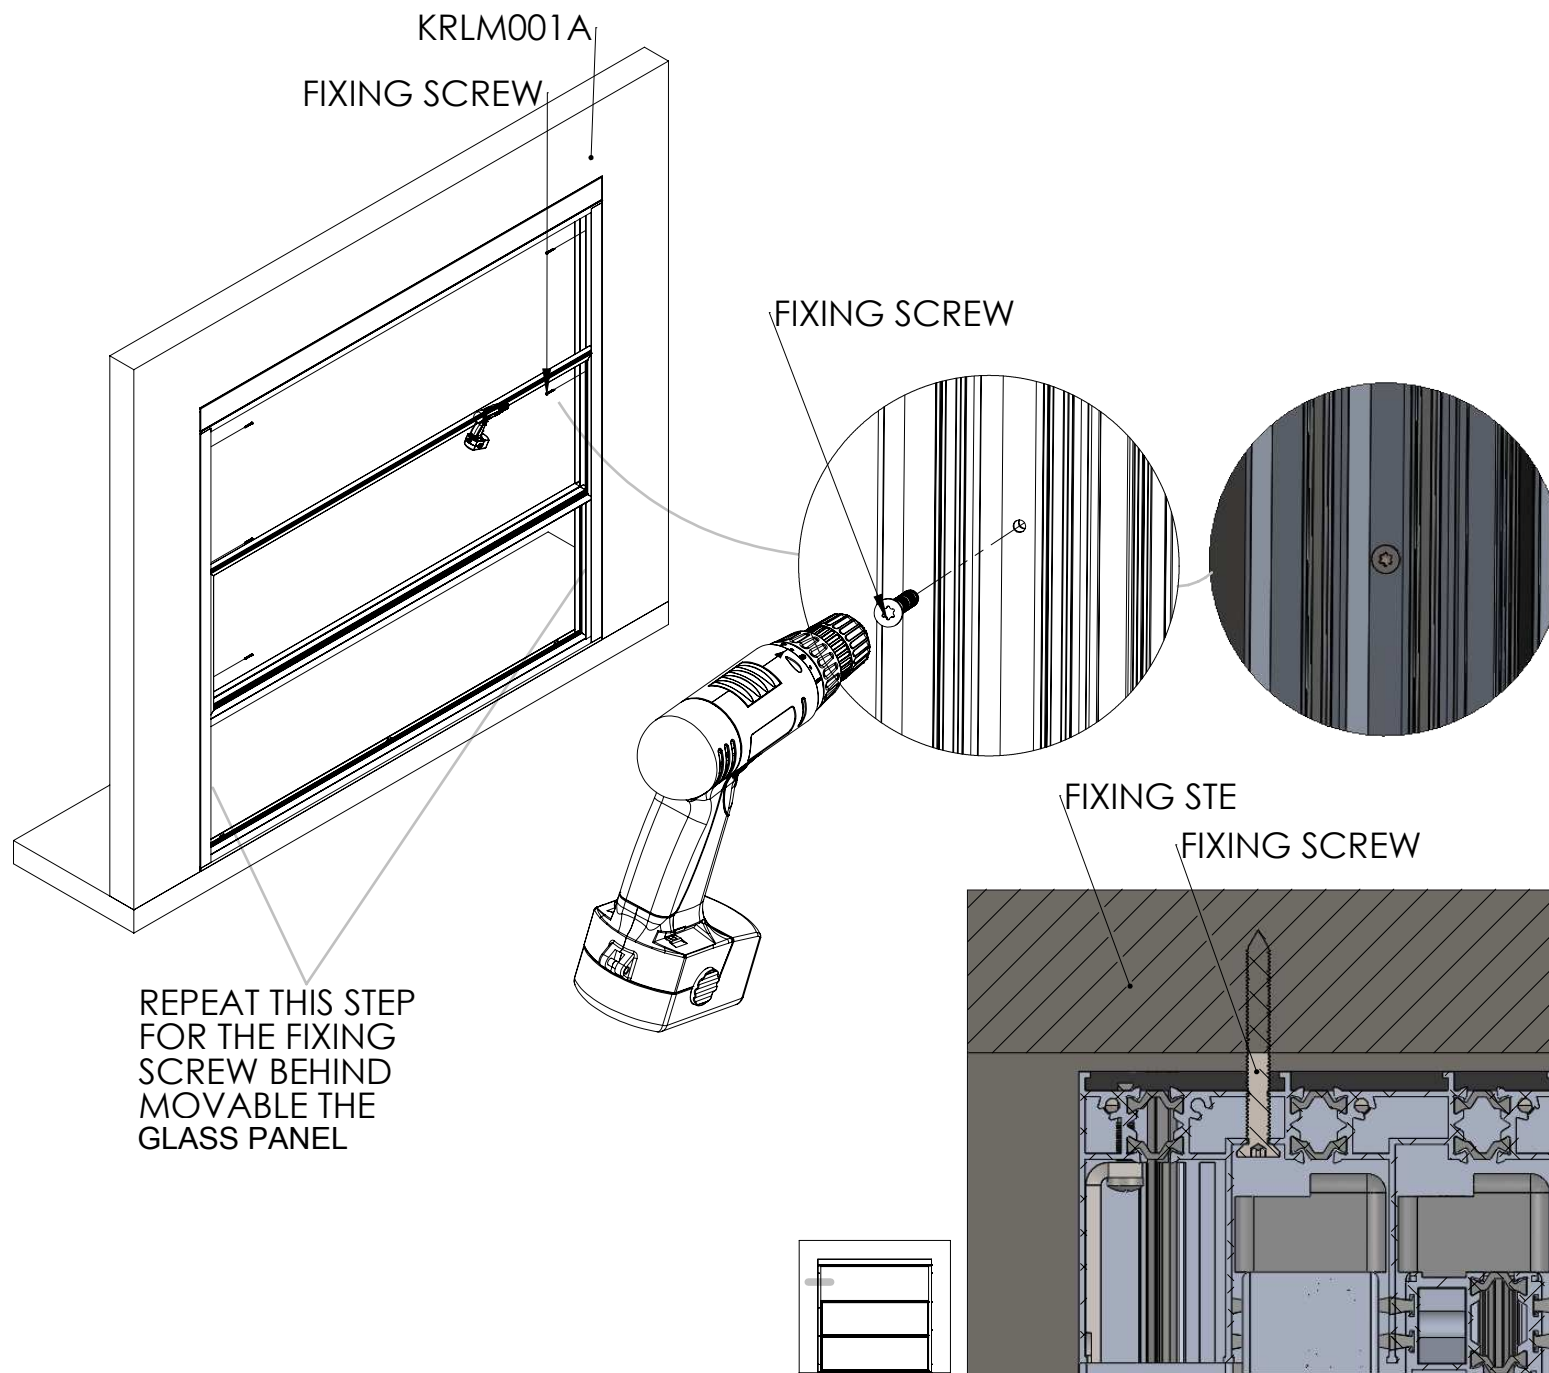





Awning For Patio Global


INSTALLATION MANUAL

M 1 9 1 0

KRLM001 C

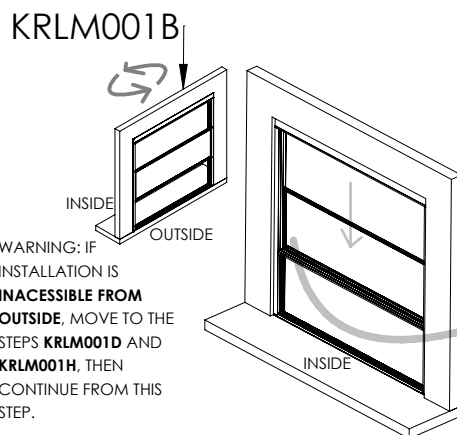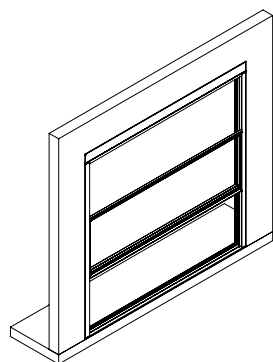

WARNING: IF
INSTALLATION IS
INACCESSIBLE FROM
OUTSIDE, MOVE TO THE
STEPS KRLM001D AND
KRLM001H, THEN
CONTINUE FROM THIS
STEP.

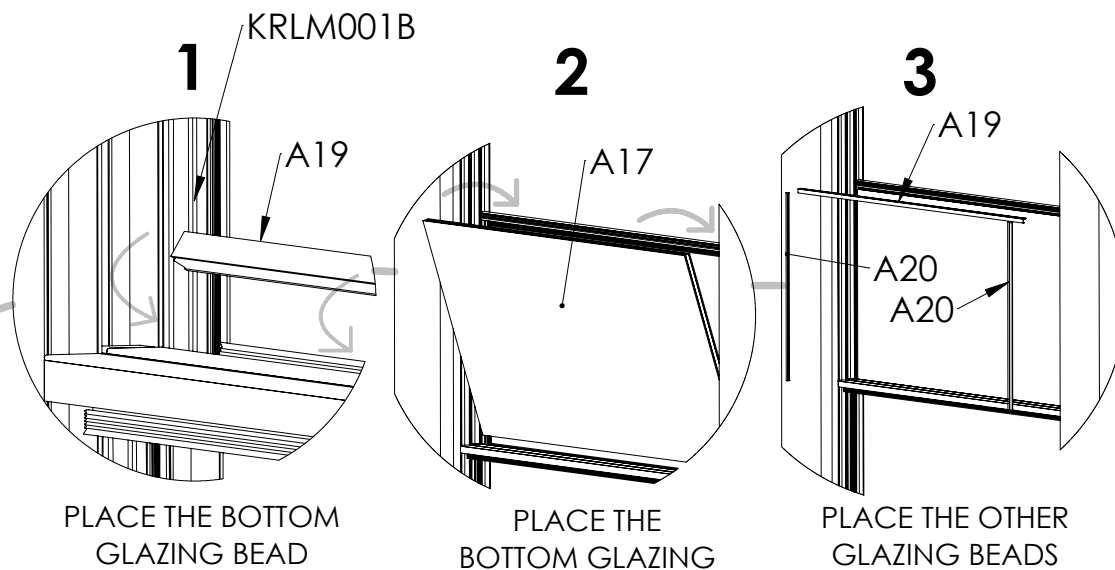

KRLM001B

×1

A17

×2

M1900-ISICAM-002

A19

×4


M1910-GP312-002

A20

×4

M1910-GP312-003

4
MOVE UP THE MIDDLE
PANEL AND REPEAT THE
STEPS 1, 2 & 3 TO INSTALL
THE MOVING GLASSES

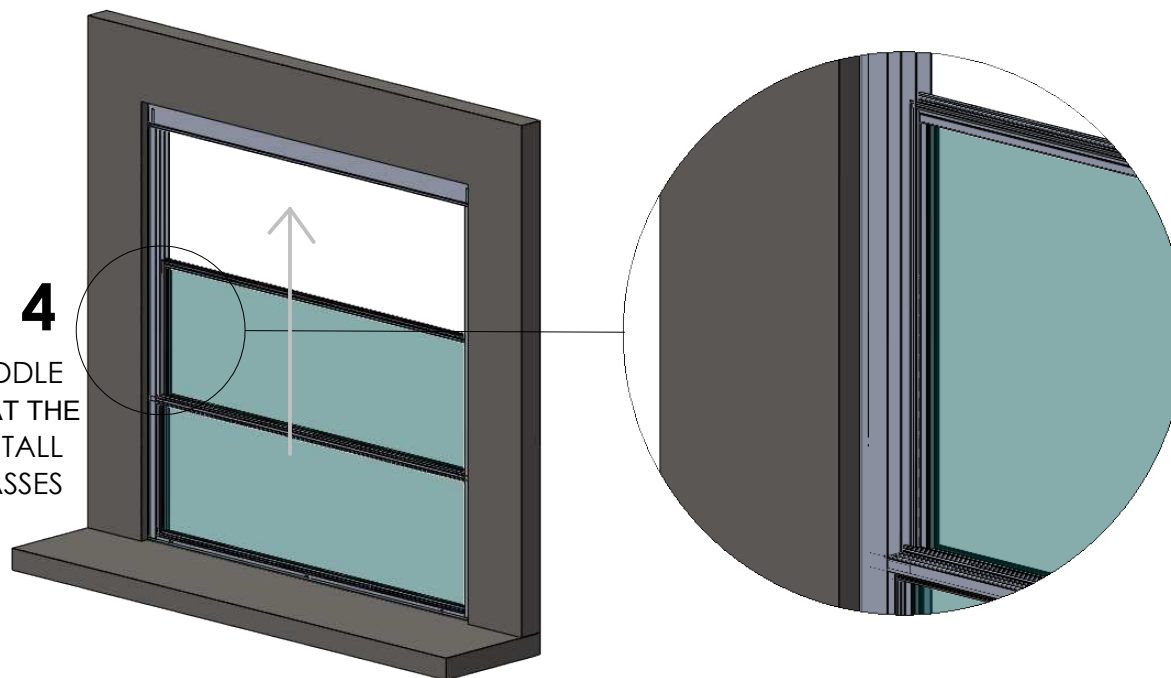




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

KRLM001 D

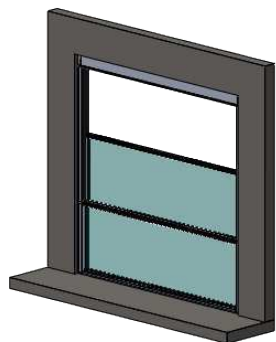

KRLM001C4

× 1

A18


× 1

M1900-ISICAM-001


A21

× 1

M1910-GP312-001

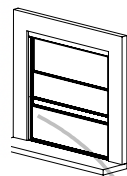


1

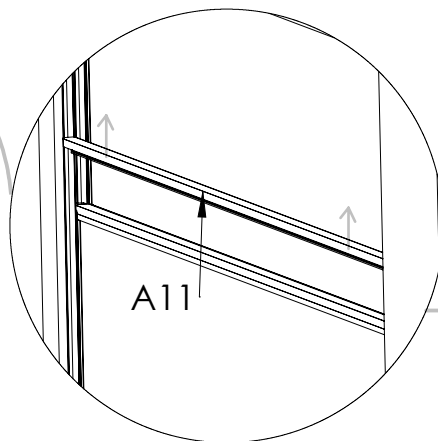


UNSCREW AND SLIGHTLY
MOVE UP **A11**

2

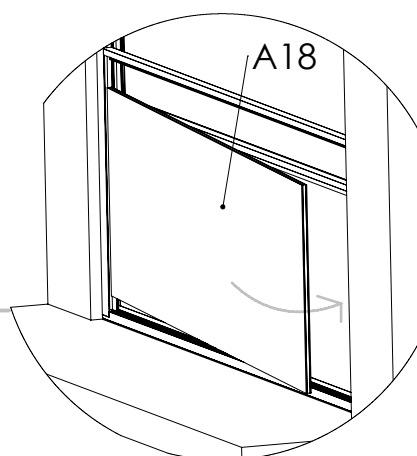

PLACE THE BOTTOM
GLAZING BY SLIGHTLY
TILTING


3

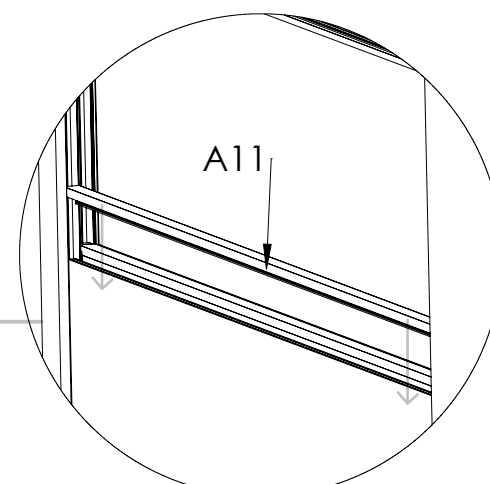


PLACE **A11** ON TOP OF
THE GLAZING AND
SCREW TO THE FRAME
AGAIN

4

PLACE THE GLAZING
BEAD

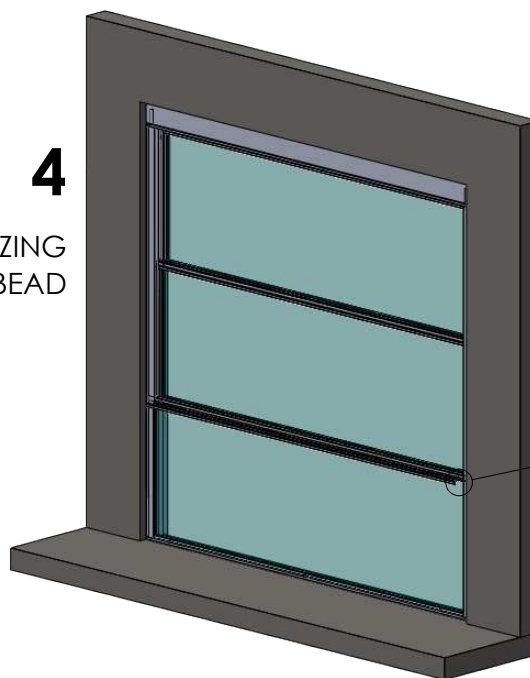

A21

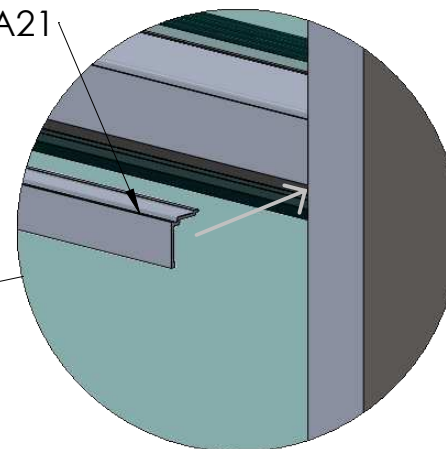




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

KRLM001 E

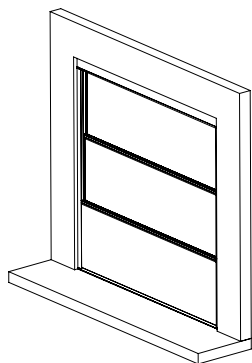


KRLM001D4


× 1

A22


× 1

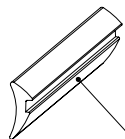



EPDM212138
(3mm KAMA FITL)

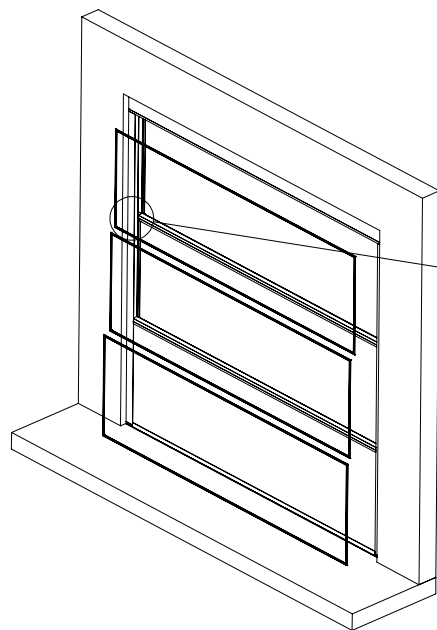

A22

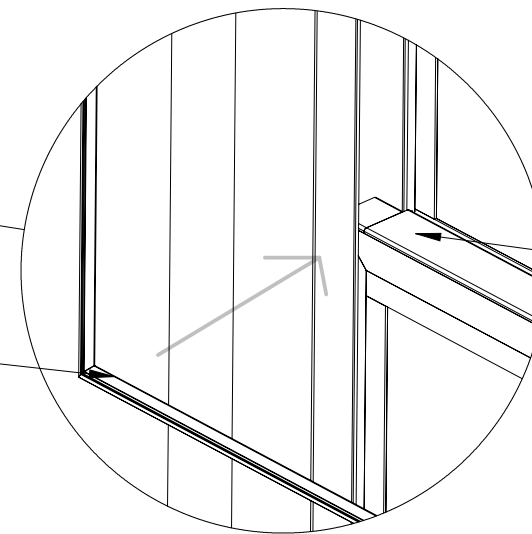

KRLM001D4

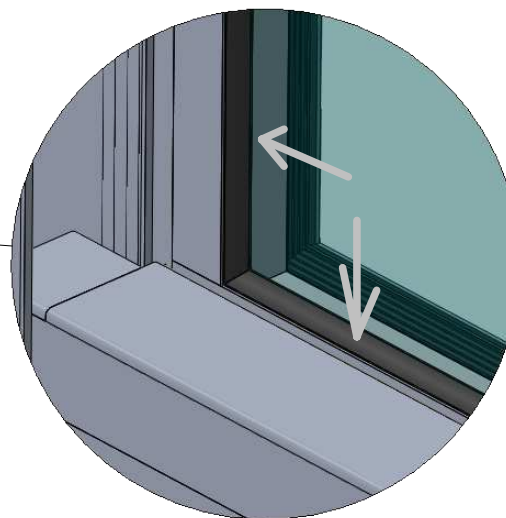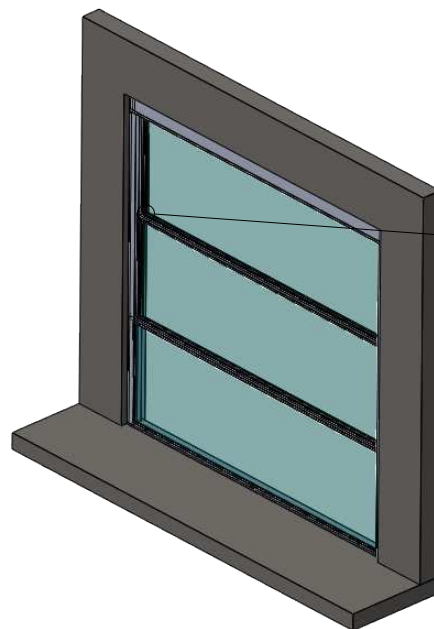




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

KRLM001 F

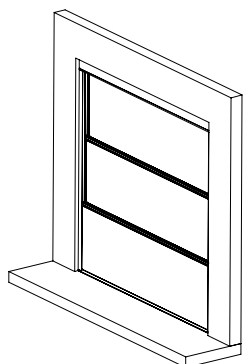


KRLM001E1

× 1

A15

× 4


YSB-MU-VÍDA-DIN7504-N-4.8X50



A23

× 2



M1900-PRC025



A24

× 2

M1900-PRC016

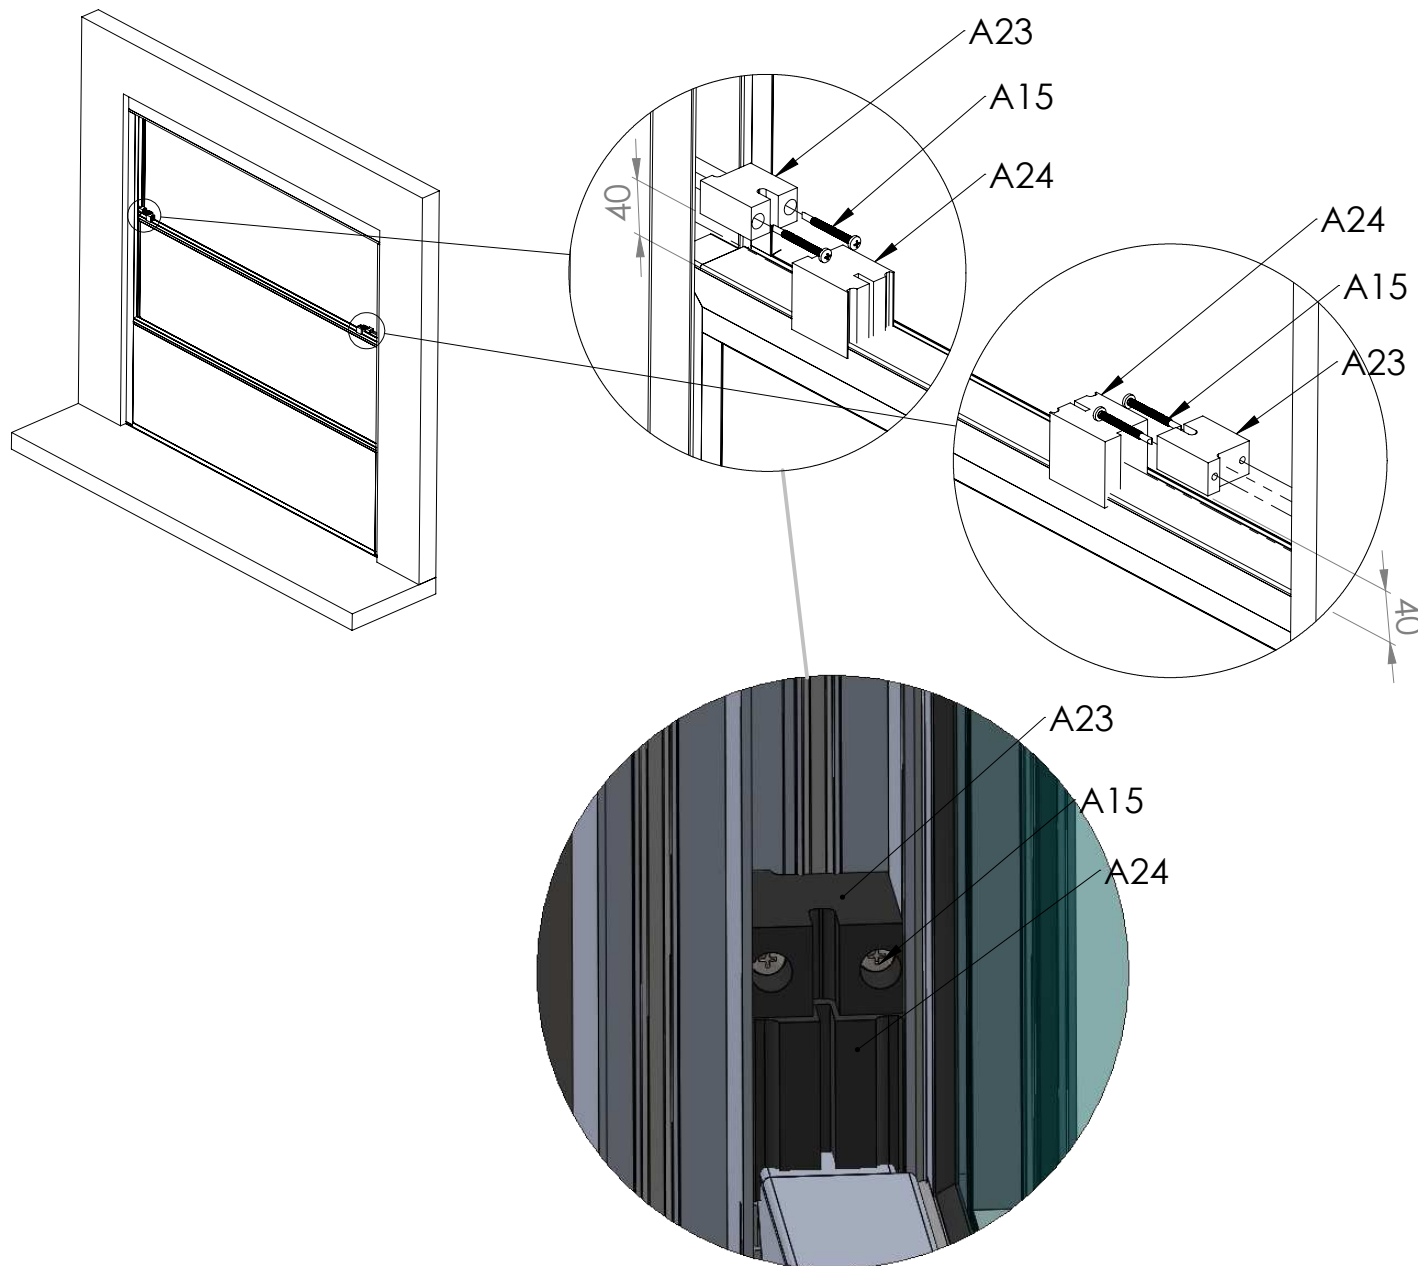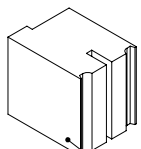






Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

KRLM001 G

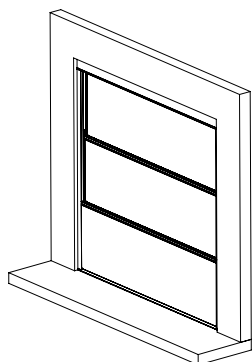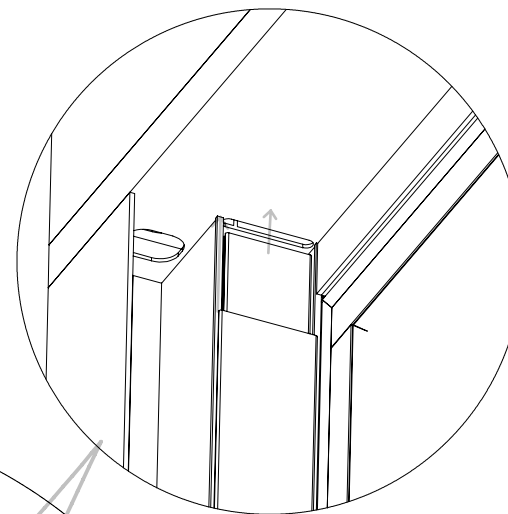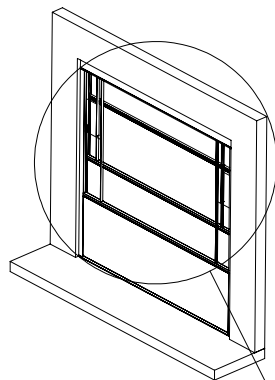


KRLM001F

×1

A25

×2




M1900-ALTMNTJ004

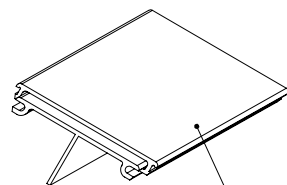

A26

×2

M1900-GP211-001

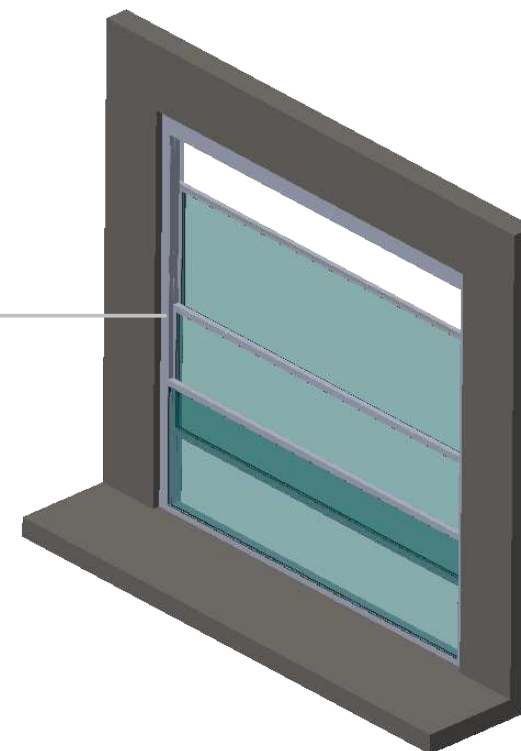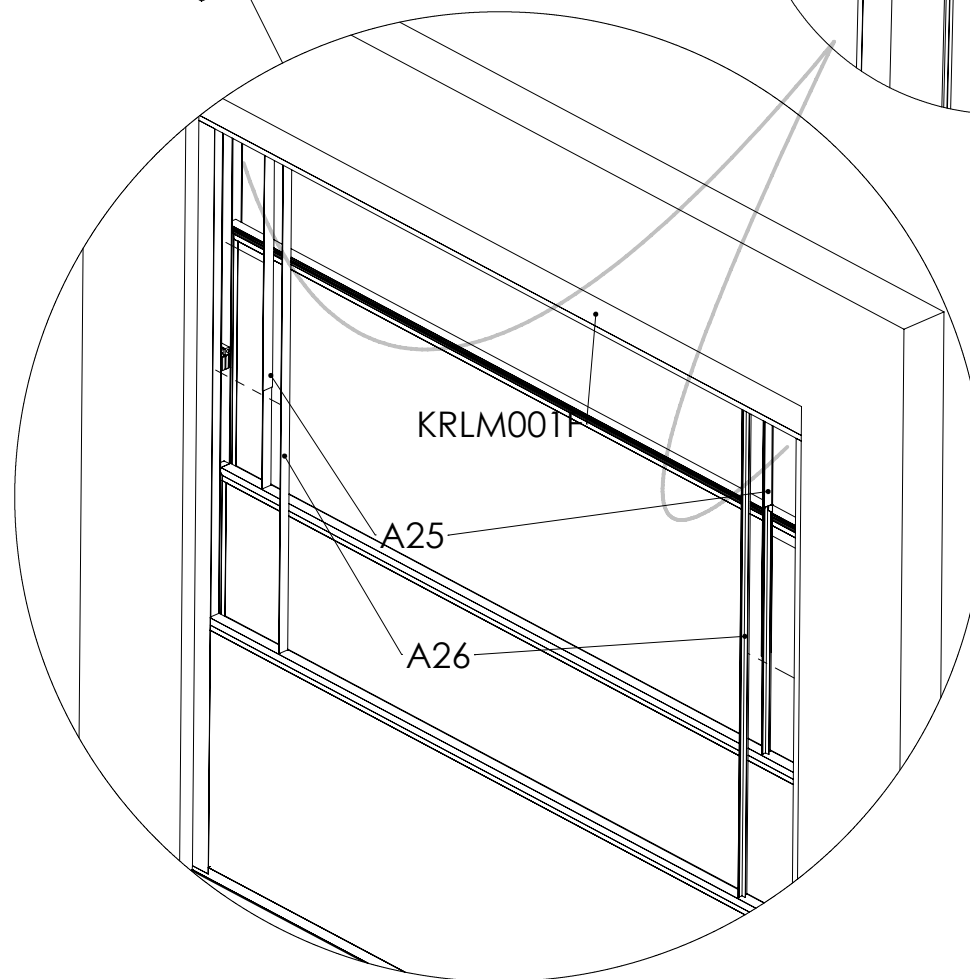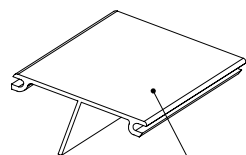




Awning For Patio Global

INSTALLATION MANUAL

M 1 9 1 0

KRLM001 H

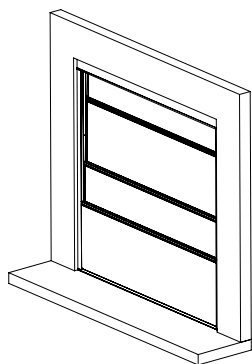


KRLM001G

×1

A27


×1

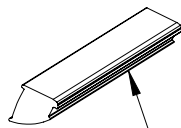


EPDM1910002
(9mm KAMA FITIL)

A28

×2



M1900-PRC024

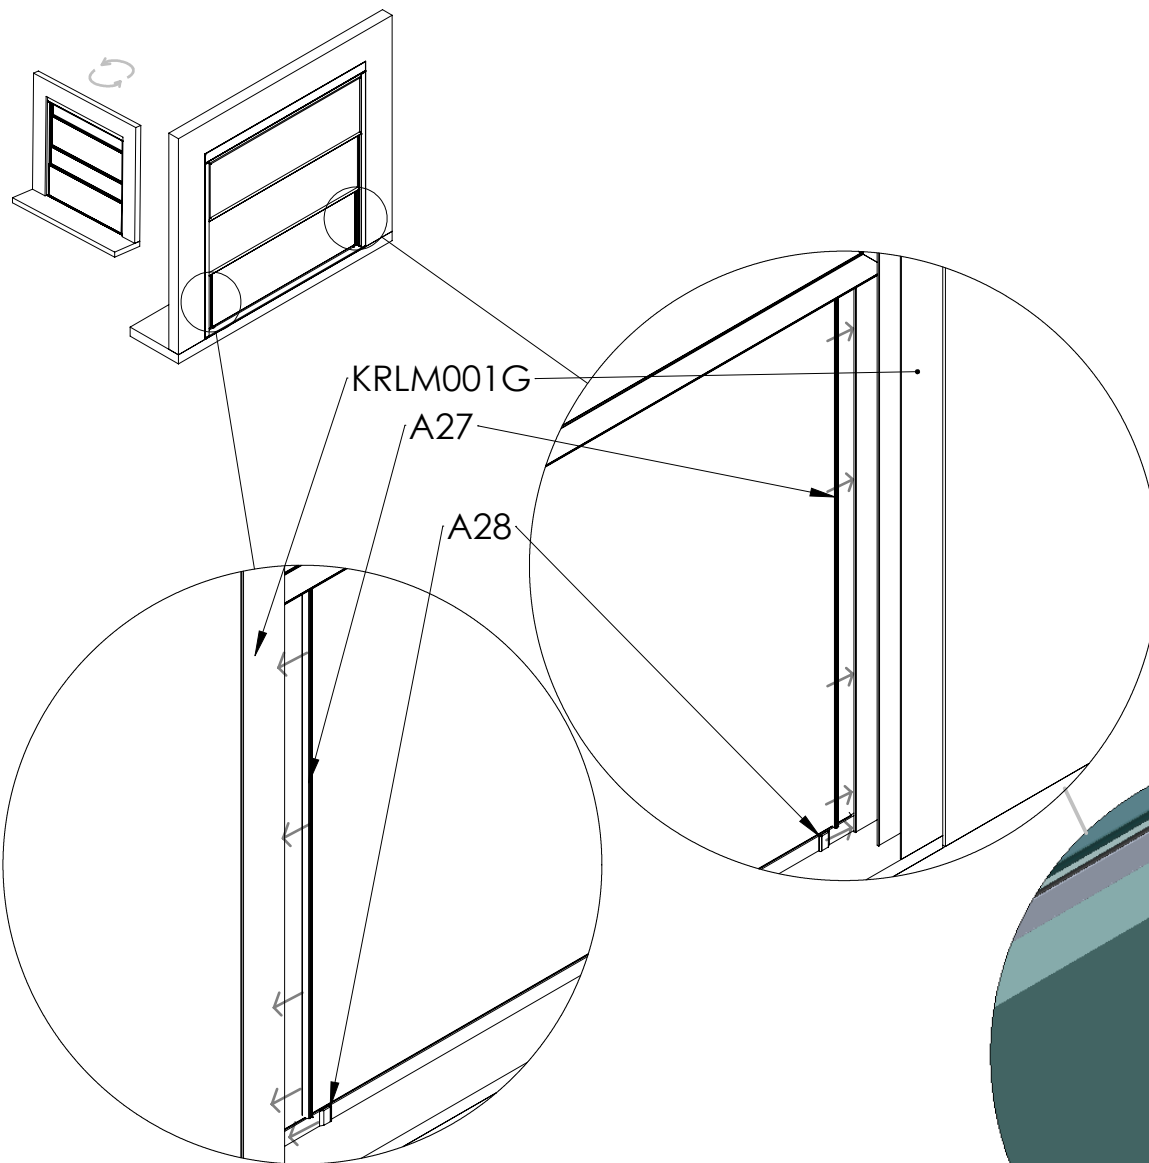




Awning For Patio Global

INSTALLATION MANUAL


M 1 9 1 0

KRLM001 I

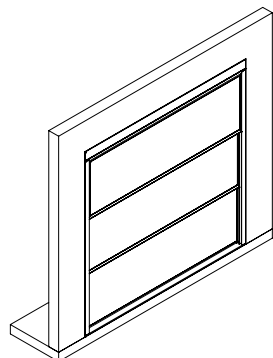





KRLM001H

× 1

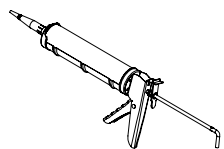

SILICONE GUN

× 1

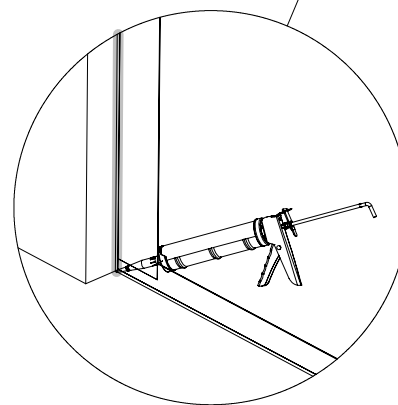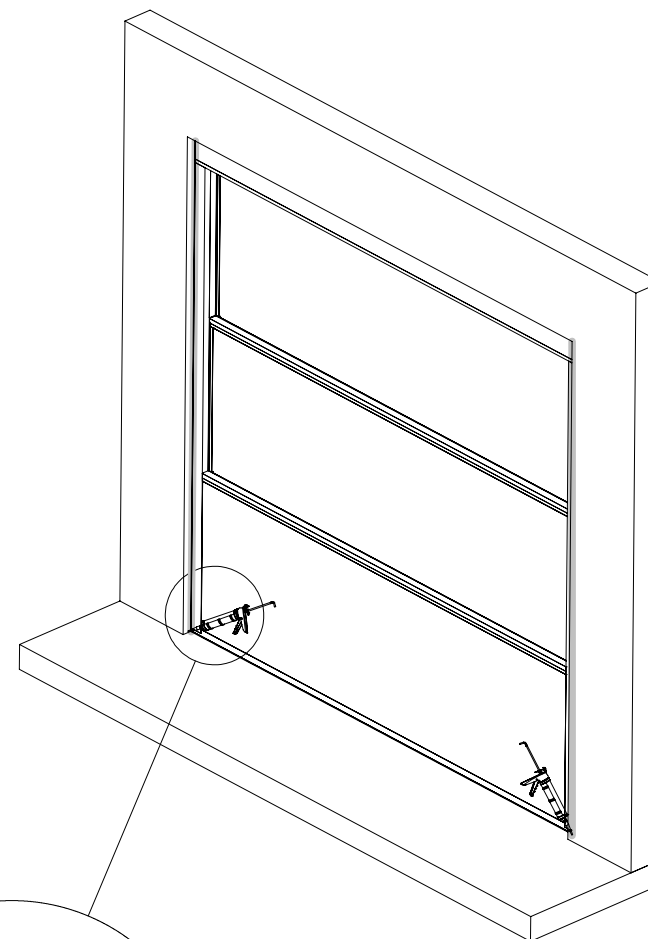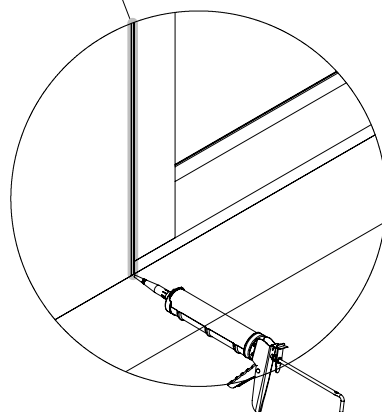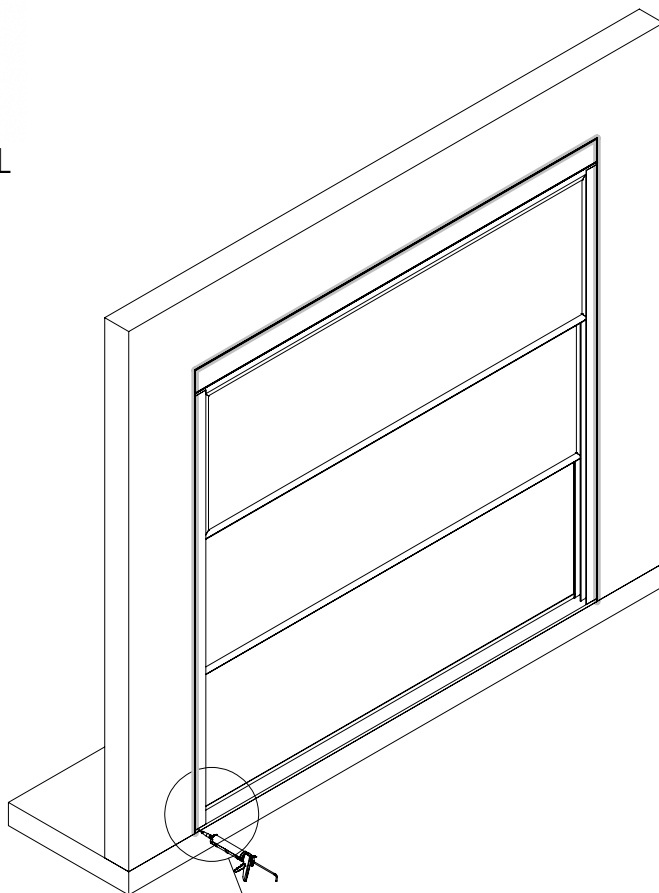



Awning For Patio Global

MOTORIZED GUILLOTINE SYSTEM
INSTALLATION MANUAL

M 1 9 1 0

KRLM001 J

MOVE THE SAHES UP
AND DOWN, MAKE
ADJUSTMENTS IF
NEEDED AND
FINALIZE THE
INSTALLATION

